

**Field Manual**  
**E-Z Set<sup>®</sup> Live Roller Conveyor**  
Installation Procedures, Maintenance, and  
Parts Identification



To contact Intelligrated:  
For service: Customer Service and Support (CSS)  
Hotline 1-877-315-3400  
On the World Wide Web: [www.intelligrated.com](http://www.intelligrated.com)

By mail:

Intelligrated  
7901 Innovation Way  
Mason, OH 45040

(513) 701-7300

Read these documents thoroughly before attempting to perform maintenance or repairs to the applicable Intelligrated conveyor system components or devices. Exercise extreme caution when working around moving and rotating conveyor equipment. Wear the proper clothing and safety equipment. DO NOT attempt to perform any maintenance until the equipment is de-energized, locked out and tagged out in accordance with established company procedures.

The information presented in these documents are correct at the time of publication. Intelligrated has made every effort to ensure that the information presented is correct and free from error. However, some errors or misprints may occur. Please contact Intelligrated with any corrections.

This document is copyrighted © 2010 by Intelligrated, all rights reserved. No Part of this manual may be reproduced and/or distributed to parties other than the customer and the customer's employees for whom it was originally produced.

The following terms are trademarks™ of Intelligrated; Accuglide™, BOSS™ UniSort™, EZ-set™. The following terms are registered trademarks® of Intelligrated; Accuzone®, UniSort®, E-Z Set®. Intelligrated® is a registered trademark.

Direct questions and comments concerning the information contained in this manual to:

Documentation Department  
Intelligrated  
7901 Innovation Way  
Mason, OH 45040

Ph (513) 701-7300  
Fax (513)701-7349

[customerservice@intelligrated.com](mailto:customerservice@intelligrated.com)

Package Conveyor Safety Signs



# Package Conveyors



 <p><b>Do Not Climb, Sit, Stand, Walk, Ride, or Touch the Conveyor at Any Time</b></p>	 <p><b>Do Not Perform Maintenance on Conveyor Until Electrical, Air, Hydraulic and Gravity Energy Sources Have Been Locked Out or Blocked</b></p>	 <p><b>Operate Equipment Only With All Approved Covers and Guards in Place</b></p>
 <p><b>Do Not Load a Stopped Conveyor or Overload a Running Conveyor</b></p>	 <p><b>Ensure That All Personnel Are Clear of Equipment Before Starting</b></p>	 <p><b>Allow Only Authorized Personnel To Operate or Maintain Material Handling Equipment</b></p>
 <p><b>Do Not Modify or Misuse Conveyor Controls</b></p>	 <p><b>Keep Clothing, Body Parts, and Hair Away from Conveyors</b></p>	 <p><b>Remove Trash, Paperwork, and Other Debris Only When Power is Locked Out and Tagged Out</b></p>
 <p><b>Ensure That ALL Controls and Pull Cords are Visible and Accessible</b></p>	 <p><b>Know the Location and Function of All Stop and Start Controls</b></p>	 <p><b>Report All Unsafe Conditions Jams should be cleared ONLY BY Authorized, Trained, Personnel</b></p>

**POST IN PROMINENT AREA**



**Section G Installation Procedures**

Accepting Shipment - - - - - G - 1

    Shortages or Errors - - - - - G - 1

    Lost or Damaged Shipment - - - - - G - 1

    Claims and Returns - - - - - G - 1

    Codes and Standards - - - - - G - 1

Warning Signs - - - - - G - 2

Safety Precautions - - - - - G - 3

Parts Replacement - - - - - G - 3

Factory Assistance - - - - - G - 3

Pre-Installation Setup - - - - - G - 4

Conveyor Assembly and Installation - - - - - G - 4

Connector Channel Assembly - - - - - G - 6

Installing the Belt - - - - - G - 7

Installing Electrical Wiring - - - - - G - 9

Prestart-Up Preparation - - - - - G - 9

    Pre-Operation Checklist - - - - - G - 9

Belt Tracking - - - - - G - 10

    Principles of Belt Tracking - - - - - G - 10

    Belt Tracking Instructions - - - - - G - 12

Adjusting Belt Tension - - - - - G - 15

Adjusting Pressure Rollers - - - - - G - 18

    For Transportation and General Accumulation Applications - - - - - G - 18

    For Minimum Pressure Accumulation Applications - - - - - G - 19

    For Merging and Diverting Applications - - - - - G - 19

Cutting the Belt - - - - - G - 20

    Splicing the Belt - - - - - G - 20

Replacing the Belt(s) - - - - - G - 20

**Section H Maintenance**

General - - - - - H - 1

    Maintenance Safety - - - - - H - 1

    New Installations - - - - - H - 1

    Maintenance Logs - - - - - H - 1

Initial Start-up and Run-in Period - - - - - H - 2

    Chain and Sprockets - - - - - H - 2

    Power Unit Reducer - - - - - H - 2

Scheduled Inspections and Maintenance - - - - - H - 3

Daily Inspections - - - - - H - 4

Weekly Inspections - - - - - H - 5

---

Belting	H - 5
Belt Lacing	H - 5
Carrier, Pressure, and Belt Return Rollers	H - 5
General Structure and Operation	H - 5
Power Unit Reducer	H - 5
Safety Guards and Devices	H - 5
Electrical Devices	H - 5
Monthly Maintenance	H - 6
External Bearings	H - 6
Internal Bearings	H - 6
Power Unit Motor	H - 6
Power Unit Reducer	H - 6
Power Unit Sprockets	H - 6
Power Unit Chains	H - 6
Power Unit Timing Belts	H - 7
Drive Sprockets	H - 7
Drive Pulley and Lagging	H - 7
Supports and Hangers	H - 7
Semi-Annual Maintenance	H - 8
Power Unit Motor	H - 8
Power Unit Reducer	H - 8
Bearings - External	H - 8
Replacing the Belt(s)	H - 9
Troubleshooting	H - 10

**Section I Spare Parts**

General Information	I - 1
Intermediate Sections	I - 1
End Idler Section with Take-Up	I - 2
End Idler Section	I - 3
Intermediate Drives	I - 4
SA2000 - Intermediate Section	I - 4
SA2001 - Intermediate Section - Low Profile	I - 5
End Drive Sections	I - 6
Auxiliary Take-Up Sections	I - 7
Non-Width Related Parts	I - 8
Width Related Parts:	I - 25
Lubricants and Paints	I - 28

---

## **SECTION G:INSTALLATION PROCEDURES**

### **Accepting Shipment**

Immediately upon delivery, check that all equipment received agrees with the bill of lading or carrier's freight bill. Any shipping discrepancy or equipment damage should be clearly noted on the freight bill before signing.

### **Shortages or Errors**

Report any shortages or errors to the Manufacturer's Customer Service in writing within ten days after receipt of shipment.

### **Lost or Damaged Shipment**

Report lost shipments to the Manufacturer's Shipping Department.

If shipping damage is evident upon receipt of the conveyor equipment, note the extent of the damage on the freight bill and immediately contact the transportation carrier to request an inspection. Do not destroy the equipment crating and packing materials until the carrier's agent has examined them. Unless otherwise agreed by the manufacturer, the Purchaser (User) shall be responsible for filing claims with the transportation carrier. A copy of the inspection report along with a copy of the freight bill should be sent to the Manufacturer's traffic department.

### **Claims and Returns**

All equipment furnished in accordance with the Manufacturer's Agreement is not returnable for any reason except where authorized in writing by the Manufacturer. Notification of return must be made to the Manufacturer's Customer Service Department, and if approved, a "Return Authorization Tag" will be sent to the Purchaser (Users). The return tag sealed in the "Return Authorization Envelope" should be securely affixed to the exterior surface on any side of the shipping carton (not top or bottom), or affixed to any smooth flat surface on the equipment, if not boxed.

Send authorized return shipment(s) transportation charges prepaid to the address indicated on the Return Authorization Tag. If initial shipment is refused, the Purchaser (User) shall be liable for all freight charges, extra cost of handling, and other incidental expenses.

### **Codes and Standards**


The conveyor equipment is designed and manufactured to comply with the American National Standard Institute's "Safety Standards for Conveyors and Related Equipment" (ANSI B20.1) and with the National Electrical Code (ANSI/NFPA70).

The Purchaser/Operator shall be familiar with, and responsible for, compliance with all codes and regulations having jurisdiction regarding the installation, use, and maintenance of this equipment. Appropriate lockout/tagout policy and procedures shall comply with the minimum safety requirements outlined in the American National Standard Institute's current publication (ANSI Z244.1).

## Warning Signs

Warning signs and labels posted on or near the conveyor equipment shall not be removed, painted over, or altered at any time. All safety devices, warning lights, and alarms associated with the conveyor system should be regularly tested for proper operation and serviced as needed. If the original safety item(s) become defective or damaged, refer to the conveyor parts list(s) of bill(s)-of-materials for replacement part numbers.

**WARNING:** For conveyors installed at floor level in an **“Authorized Personnel Access Area Only”**, fixed rollers (3” centers) may be used in conjunction with an emergency pull cord. The area must be apart from normal working areas and access must be marked with a sign, **“Warning - Do Not Enter - Authorized Personnel Only”**. Part Number for ordering Warning Sign is 957305. The illustration below shows the location for installation of the sign.

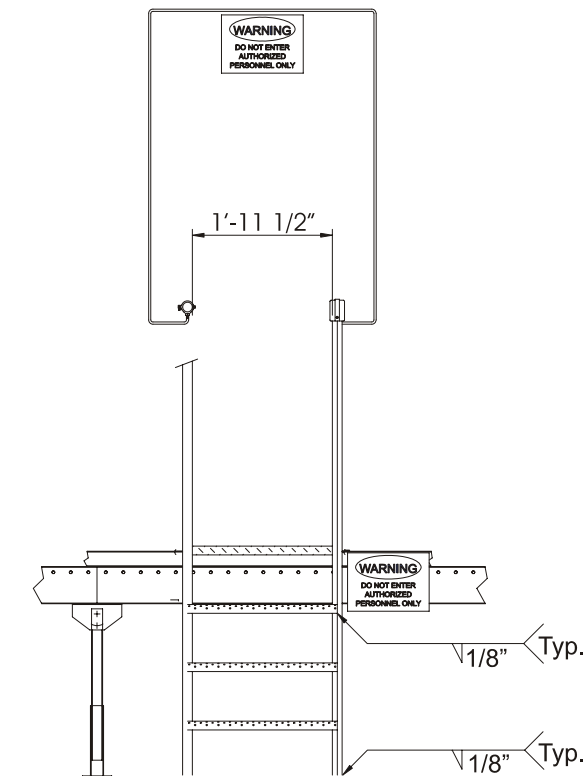

TO ORDER LADDER SUPPORTS PER CROSSOVER:		
QNTY:	PART DESCRIPTION:	PART DESCRIPTION:
1	957173	X-OVER SIGN FRAME
2	957174	3/8" DIA NYLON LOOP CLAMP (TO ATTACH SIGN TO FRAME)
4	957175	1 1/4" DIA PIPE RING W/BOLT (TO ATTACH SIGN TO LADDERS)
4	957305	SIGN_WARN BY-WS10 SETON M2540



---

## Safety Precautions

- TURN OFF conveyor power source(s) and affix appropriate lockout/tagout device(s) to operating controls before servicing the equipment. ONLY trained and qualified personnel who are aware of the safety hazards should perform equipment adjustments or required maintenance while the conveyor is in operation.
- OBSERVE all warning signs, lights, and alarms associated with the conveyor operation and maintenance, and be alert at all times to automatic operation(s) of adjacent equipment.
- EXERCISE extreme caution near moving conveyor parts to avoid the hazard of hands, hair, and clothing being caught.
- DO NOT sit on, stand on, walk, ride, or cross (over or under) the conveyor at any time except where suitable catwalks, gates, or bridges are provided for personnel travel.
- DO NOT attempt to repair any equipment while the conveyor is running, replace any conveyor component without appropriate replacement parts, or modify the conveyor system without prior approval by the manufacturer.
- DO NOT operate the conveyor until all safety guards are securely in place, all tools and non-product materials are removed from or near the conveying surfaces, and all personnel are in safe positions.
- DO NOT remove or modify any safety devices provided on or with the conveyor.
- DO NOT clear jams or reach into any unit before first turning off the equipment power source(s) and affixing appropriate lockout/tagout device(s).

## Parts Replacement

To minimize production downtime, selected conveyor spare parts should be stocked for replacement of defective components when required. Refer to the equipment bill(s)-of-materials where quantity requirements or code numbers are not indicated on the conveyor parts list. For added convenience, a list of selected spare parts for standard products is included in this manual. See Section I.

## Factory Assistance

Contact Field Service for installation, operation, or maintenance assistance, or Customer One Protection (COP) for replacement parts.

---

## Pre-Installation Setup

Prior to installation, review the layout drawings to determine the proper location, orientation, and elevation of the conveyor sections. Read all instructions provided in this manual.

Identify the individual components that make up the conveyor unit, and note the orientation (right-hand or left-hand) of the various components. Motor driven components have their orientation shown by a box depicting a chain guard on one side of the conveyor.

Snap a chalk line on the floor (or other supporting structure) to establish the centerline of the conveyor. Arrange the conveyor items and mounting supports along this base line according to the layout drawing to ensure that all components are present and are compatible for proper assembly. Leave the field-installed carrier rollers, photoelectric controls, and other accessory items in the shipping containers until all conveyor items are completely installed and adjusted for proper elevation.

End Drives are for one-way travel, and must be assembled at the infeed end of the conveyor. One-way Intermediate Drives should be assembled as close as possible to the infeed end of the conveyor. Intermediate Drives for reversing operation should be located near the middle of the conveyor.

## Conveyor Assembly and Installation

Use the following steps to assemble and install the conveyor:

1. Remove any shipping braces and filler blocks and check the alignment of frames, pulleys, and rollers of each section before proceeding.

Corner-to-corner diagonal frame measurements of each conveyor section should be equal within 1/16". Also, check that all idler rollers and pulleys rotate freely.

2. Starting at one end of the conveyor, attach two supports, A and B, to the End Drive or Idler Section. See Figures G - 1 and G - 2. Check the installed conveyor elevation (dimension H) against the required elevation.

Note: If connecting to an adjoining conveyor, center support A under the section joint and attach to both conveyors.

Note: There are three cases for determining the location for support B, as follows:

- Install support B as shown in Figure G - 1 if no interference with the drive assembly will result.
- If interference with the drive assembly would result from positioning support B as shown in Figure G - 1 and if the first Intermediate Section does not exceed 9', support B is not required.
- If interference with the drive assembly would result from positioning support B as shown in Figure G - 1 and if the Intermediate Section does exceed 9', position support B about halfway between end support A and the farther end of the first Intermediate Section.

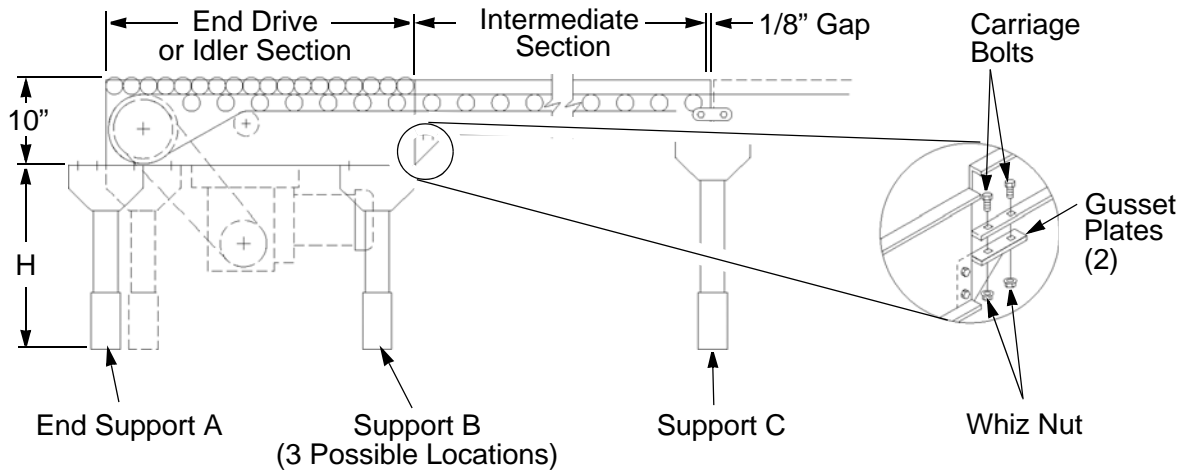


Figure G - 1 Assembling the Conveyor

Allow a 1/8" Gap Between Intermediate Sections

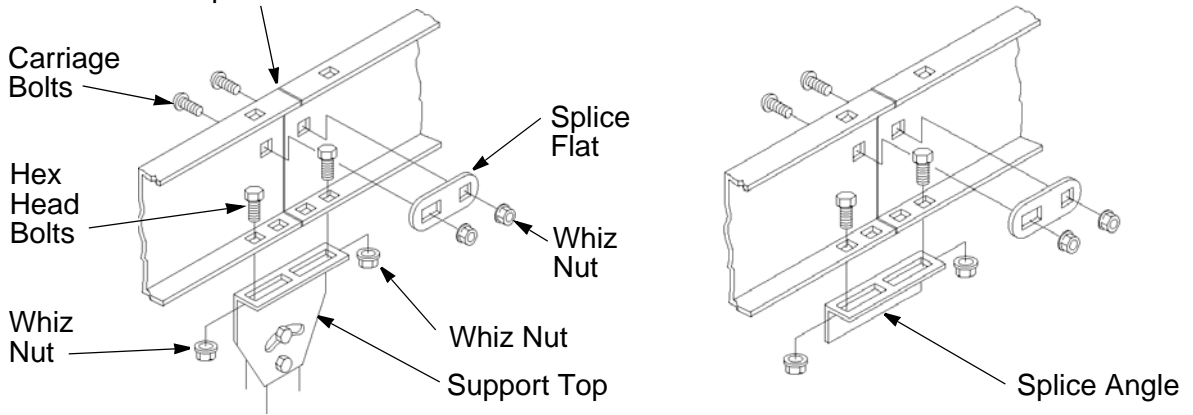


Figure G - 2 Standard Floor Support Assembly

3. Attach support C (centered) to one end of the first Intermediate Section. Assemble the other end to the gusset plates (factory-assembled to the drive or idler component). Couple sections using splice flats. See Figure G - 2.
4. Adjust the supports to the required height and level the conveyor section using a spirit level. Check the alignment of the frame, pulleys, and rollers.

Note: Frames, pulleys, and rollers MUST be square to track the belt properly. When the corner-to-corner squaring method is impractical (as with long, narrow sections), use a steel square to check pulleys, rollers, and bolted cross members. Realign if necessary to ensure they are mounted perpendicular to the conveyor side frames.

5. Assemble support(s) to the remainder of the conveyor's Intermediate Section(s). Leave a 1/8" gap between sections.
6. Install the last end section in the same manner as the first.
7. Check the installed conveyor elevation against the required elevation. If the joint between two sections is not located over a support, it will be necessary to assemble a splice angle

to the bottom flanges at the joint. See Figure G - 2. Do not exceed 12'-0" between supports.

### Connector Channel Assembly

If the E-Z Set Live Roller Conveyor connects to the adjoining conveyor, use a common support to support the ends of both conveyors. See Figure G - 3.

- If each conveyor has the same frame depth, bolt the two units directly to the support top plate.
- If they are not the same, use connector channels of depth "H" to compensate for the difference in depth. Connector channels are shipped with fasteners.

When connecting an E-Z Set Live Roller Conveyor to a belt conveyor, insert fill flats (1" x 4" x 3/16") between the support top plate and the E-Z Set Live Roller Conveyor frame to compensate for the thickness of the belt.

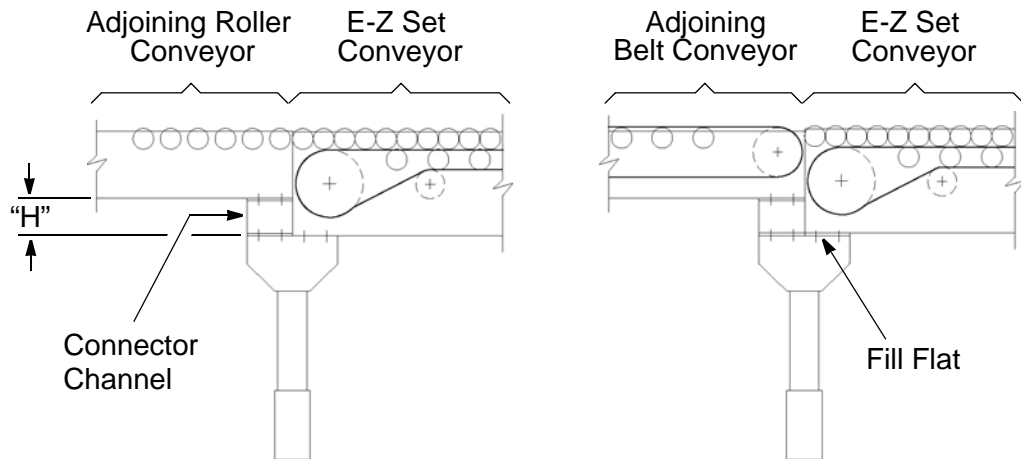


Figure G - 3 Installing a Connector Channel and Fill Flats

---

## Installing the Belt

Before installing the belt, make certain that:

- All frame sections are aligned, level, square, and anchored
  - All pulleys and rollers are perpendicular to the conveyor frame and rotate freely
  - All pressure rollers are adjusted to their lowest setting
1. Adjust the take-up pulley to its retracted position.
  2. Measure for the exact belt length requirement. Thread a measuring tape (or equivalent) through the conveyor following the exact path the belt will take.
  3. Cut the belt square and to the required length. See “Cutting the Belt” on page G - 20.
  4. Lacing the belt at this time is recommended. Lacing the belt after it has been threaded through the conveyor is also a common practice.

Note: Both sides of the belt are the same, and belt orientation is not a concern.

5. Thread the belt through the conveyor:

Note: It is a good idea to remove the chain from the power unit to the drive pulley. This allows the pulley to turn freely while installing the belt. Reconnect the chain after the belt is laced up.

### For Style 01P

- Run the belt around the End Drive pulley and snub roller
- Over the return rollers
- Around the end take-up idler pulleys
- Between the carrier and pressure rollers (in the 3'-0" End Drive and Idler Sections at each end of the conveyor)
- Roll out the belt across the top of the pressure rollers in the Intermediate Sections.

### For Style 02

- Run the belt around the Intermediate Drive and take-up pulleys and snub rollers
  - Over the return rollers
  - Around the snub rollers and idler pulleys of the two end Idler Sections
  - Between the carrier and pressure rollers (in the 3'-0" End Drive and Idler Sections at each end of the conveyor)
  - Roll out the belt across the top of the pressure rollers in the Intermediate Sections.
6. If the belt was previously laced on the floor, go to step 8; if not, attach the lacing to the belt at this time.
  7. Using the lacing pin supplied, join the two ends of the belt.
  8. Install the carrier rollers in the Intermediate Sections. See Figure G - 4.

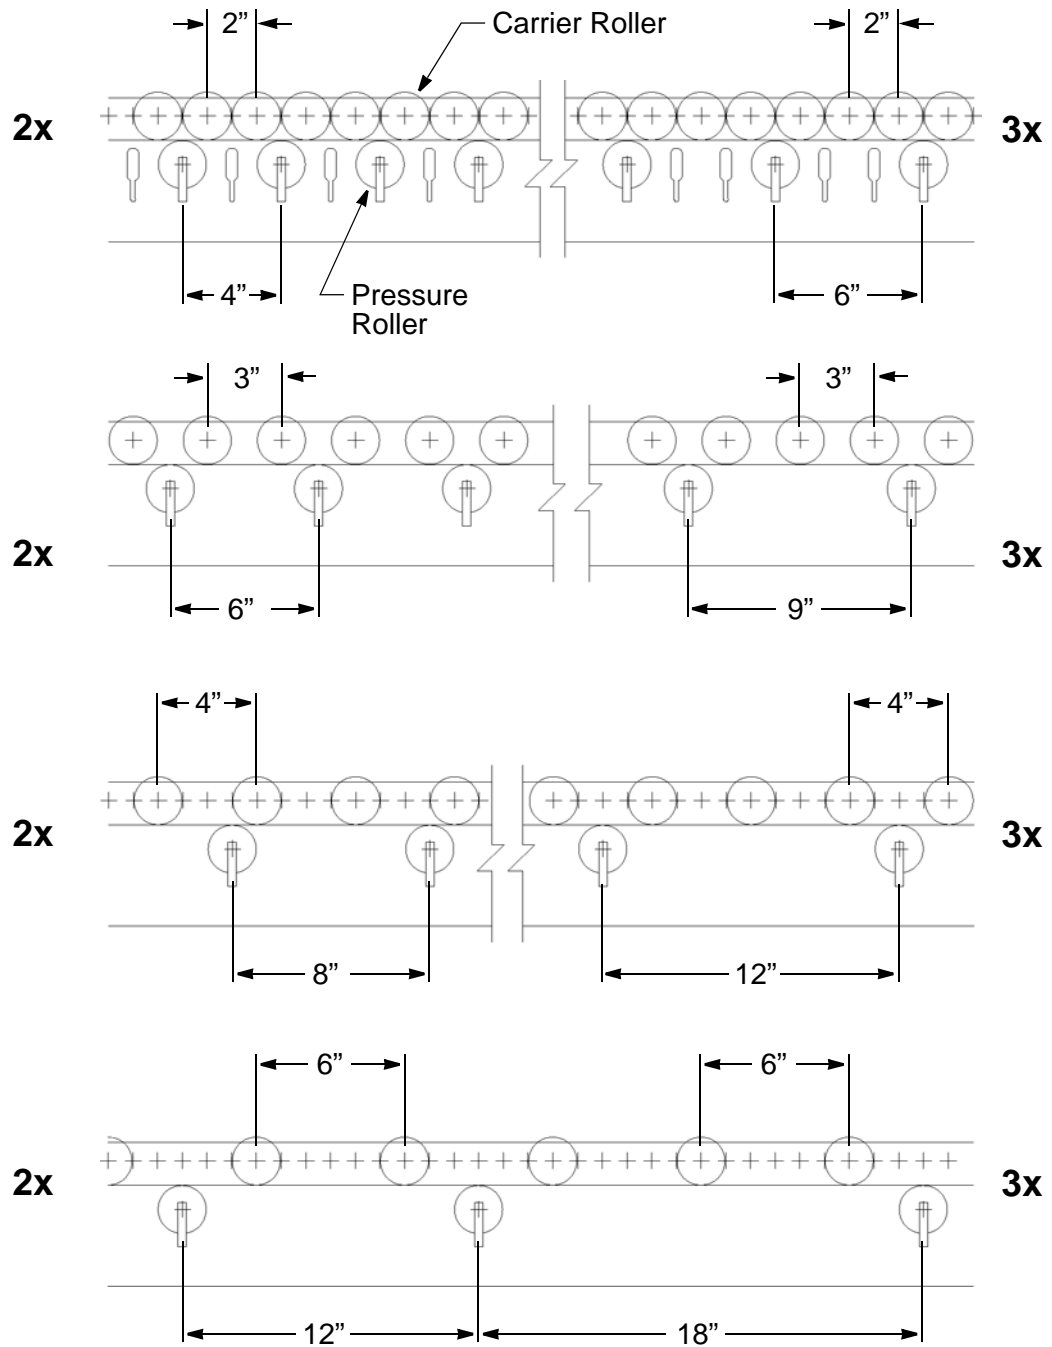


Figure G - 4 Standard Carrier Roller and Pressure Roller Spacing Combinations

---

## Installing Electrical Wiring

Electrical wiring must be installed by a licensed electrician. The electrician must be familiar with the operation and adjustment requirements of the conveyor so that the conduit and apparatus do not interfere with required access.

A lockable disconnect switch, rated to the service, must be mounted near and wired to each drive motor. All power to be connected to the motor must be routed through the disconnect switch. This will permit local physical lockout of the motor by persons making repairs or adjustments to the drive.

After completion of the wiring, the electrician should “bump” each drive motor, and if necessary, modify the connections to achieve proper rotation for the required direction of belt travel.

## Prestart-Up Preparation

---

---

**CAUTION:** To prevent accidental start-up, make certain electrical power to the power unit is turned off and locked out.

---

---

## Pre-Operation Checklist

The following describes the check list prior to equipment start-up:

1. Check conveyor elevation and adjust supports as needed.
2. Check conveyor alignment (lengthwise and width wise) with a spirit level. Adjust supports or add shims as needed and securely tighten all mounting bolts.
3. Check that all pulleys and rollers are mounted perpendicular (90°) to the direction of belt travel.
4. Check belt sag and adjust take-up pulley as needed. Do not over tension the belt.
5. Check driver/driven sprocket alignment with a straightedge. Securely tighten all sprocket fasteners.
6. Check drive chain tension and adjust as needed. Securely tighten all mounting bolts.
7. Check motor wiring connections.
8. Check other wiring connections and test all conveyor electrical controls for proper operation.
9. Check that all conveyor safety guards removed during the installation have been replaced.
10. Check that tools and all installation materials have been removed from the conveyor.
11. Check that the reducer lubricant is up to the oil level plug. If the reducer requires additional lubricant, refer to the manufacturer’s tag attached to the reducer before adding.  
Note: Before reinstalling the oil level and fill plugs, treat the plug threads to prevent oil leakage.
12. Review Safety Precautions listed in this Section. See “Safety Precautions” on page G - 3.

## Belt Tracking

At this point, the conveyor is properly installed, all sections are aligned, and all carrier rollers are level and square with the frame. The belt is installed with all pulleys, snub rollers, and return rollers at right angles to the conveyor frame, and all prestart-up precautions observed. Now you are ready to track the belt.

**WARNING:** Belt tracking is performed while the conveyor is running and is dangerous. Only trained and qualified personnel must perform the belt tracking function. Personnel must be instructed to always be alert for any unsafe condition and to use extreme care when tracking the belt.

## Principles of Belt Tracking

You must understand the principles of belt tracking in order to properly track the belt:

- **Crowned Pulleys** - Belts connecting parallel shafts tend to run toward that part of the pulley which is largest in diameter. Pulleys are therefore crowned to keep the belt on center. See Figure G - 5.
- **Taut Belt** - In order for the crowned pulleys to be effective, the belt must be sufficiently tensioned to cause the belt to conform to the crown of the pulleys.
- **Parallel Shafts** - If the pulley shafts are not parallel, the belt will creep toward the side where the shaft centers are closer. See Figure G - 6.

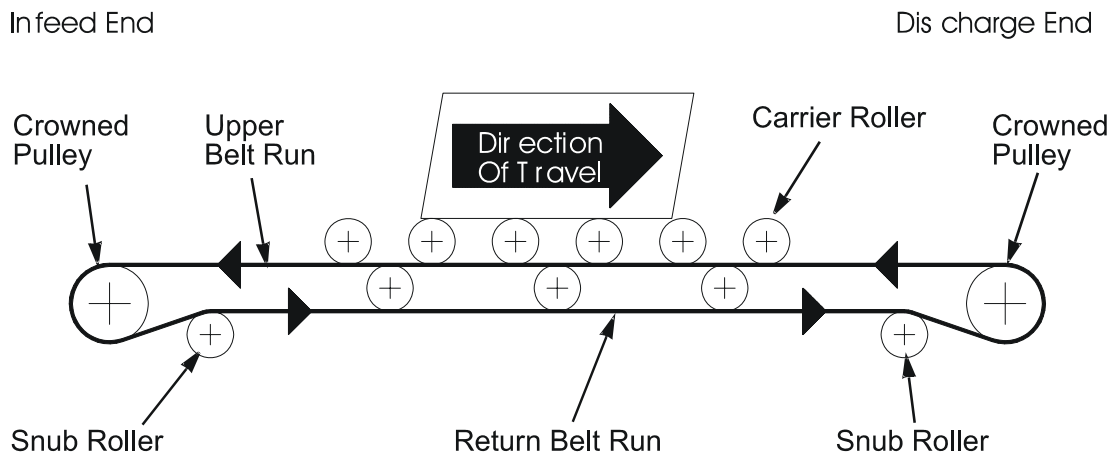


Figure G - 5 Identification of Components



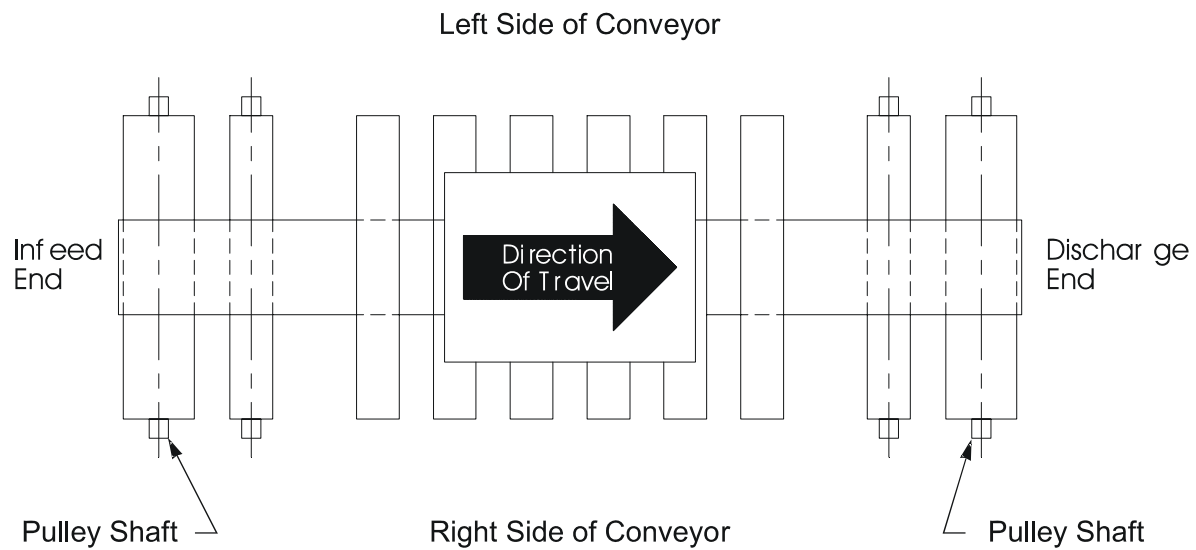


Figure G - 6 Pulley Shafts Must Be Parallel

## Belt Tracking Instructions

1. When the conveyor is first turned on, check the entire length for serious tracking problems that require immediate attention.
2. Watch the conveyor's discharge-end pulley for several revolutions of the belt. The "discharge" end is the end where the belt begins its "upper" run, in which it drives the carrier rollers. See Figure G - 7.
  - A. If the belt wanders back and forth across the center of the pulley during a complete revolution, no adjustments are required. This condition is caused by camber in the belting and tends to straighten itself out in time.
  - B. If the belt tracks to one side of the discharge-end pulley:
    - Adjust the discharge-end snub roller as indicated.
    - Check the belt's "return" run, and adjust the belt-return roller(s) as indicated.
    - If the conveyor has an Intermediate Drive or Auxiliary Take-Up unit, refer to step #4.


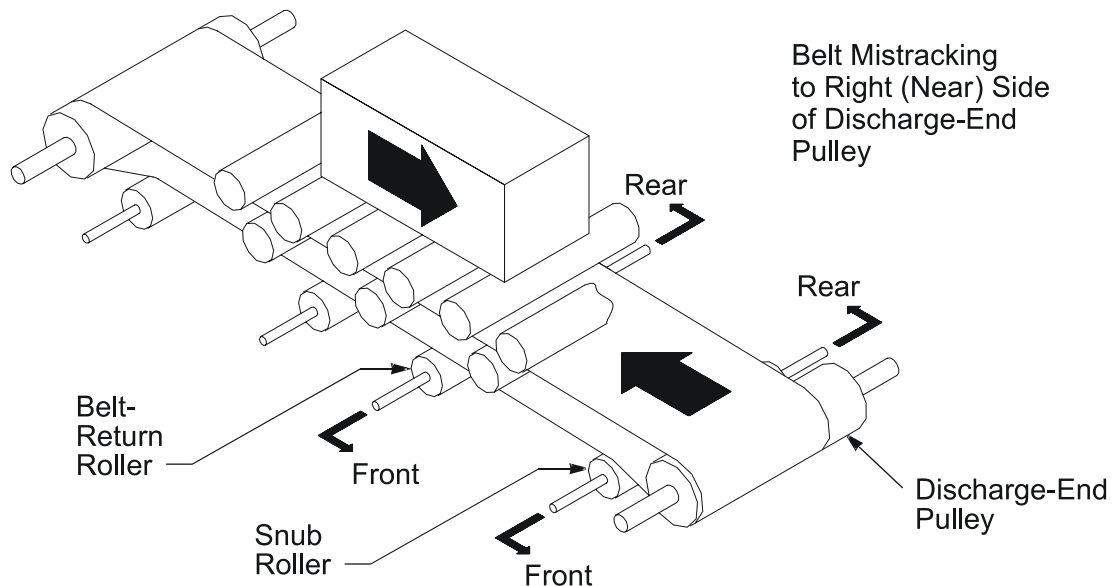


Figure G - 7 Tracking Belt at Discharge End of Conveyor

3. Next observe the conveyor's infeed-end pulley. See Figure G - 8.
  - A. If the belt wanders back and forth across the center of the pulley during a complete revolution, no adjustments are required. This condition is caused by camber in the belting and tends to straighten itself out in time.
  - B. If the belt tracks to one side of the infeed-end pulley, check the tracking through the "upper" run, and adjust the infeed-end pulley accordingly:
    - If the "upper" run mistracks at a particular section, check that the section's rollers are square to the rails. If not, rack the frames by adjusting the 1/8" gaps located between the Intermediate Sections.
    - If the belt gradually moves to one side along the entire length, adjust the infeed-end pulley as indicated.

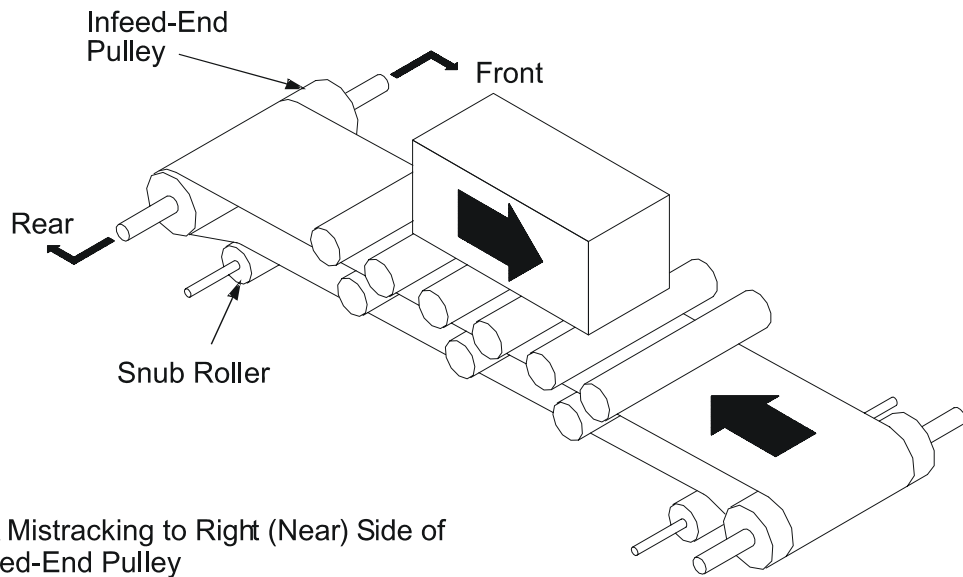

Belt Mistracking to Right (Near) Side of Infeed-End Pulley

Figure G - 8 Tracking the Belt at the Infeed End of the Conveyor

3. If the belt mistracks through a Intermediate Drive or Auxiliary Take-Up, steer the belt back toward the center by adjusting snub roller "A" or snub roller "B" (adjacent to the drive and take-up pulleys). See Figures G - 9 and G - 10.
4. For conveyors with two-way travel, adjust belt tracking as follows. See Figures G - 9 and G - 10.
  - Track the belt in the direction of travel with the larger amount of product first.
  - Reverse the direction of travel, recheck the tracking of the belt, and adjust as necessary.

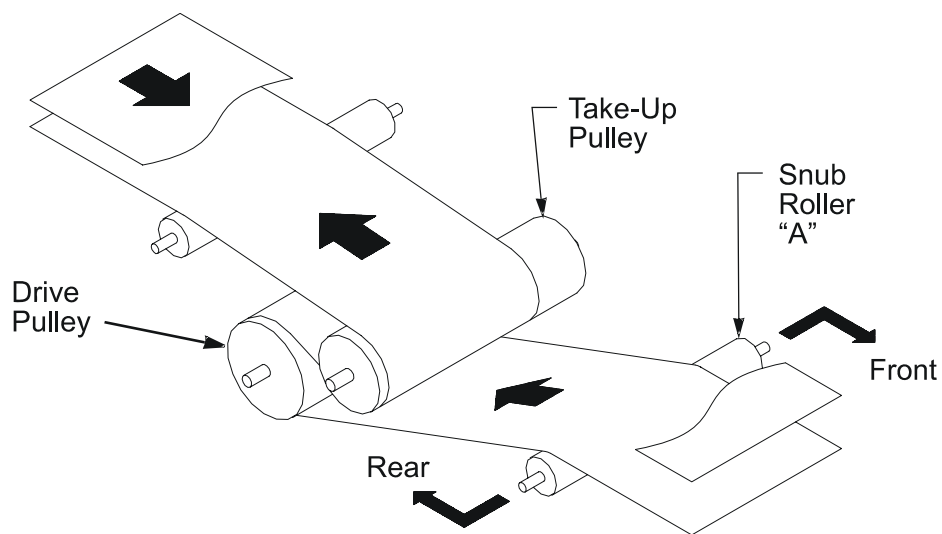


Figure G - 9 Tracking the Belt using Snub Roller "A"

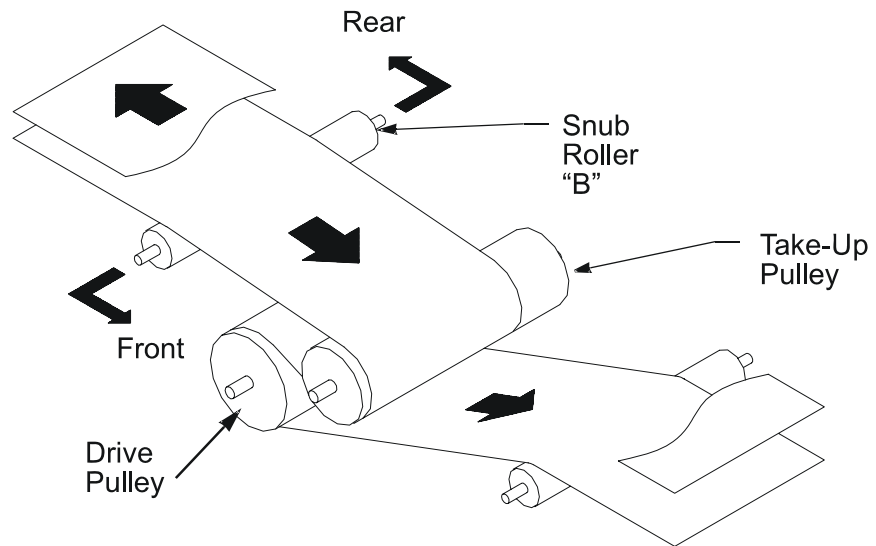


Figure G - 10 Tracking the Belt using Snub Roller "B"

## Adjusting Belt Tension

After the belt has been installed and tracked, additional adjustment of the belt tension may be required. New belts stretch after they have been broken in. All belts require occasional adjustment after long periods of operation. Accumulation applications are sensitive to belt tension.

Adjust belt tension with the take-up pulley located either in the end idler with take-up unit, Intermediate Drive unit, or Auxiliary Take-Up unit. See Figures G - 11, G - 12 and G - 13. Adjust the tension by turning the take-up nuts against the square axle of the take-up pulley.

**WARNING:** If adjustment of the take-up pulley requires removing the chain guard, be careful to stay clear of the chain and drive components.

Make the adjustments in small (approximately 1/8" to 1/4") increments on each side. Measuring the distance from the square axle of the pulley to the take-up bolt bracket helps to ensure equal adjustment on both sides. Overtensioning one side causes the belt to track away from the center of the conveyor.

**Note:** Use the snub rollers to track the belt - not the take-up pulley.

For general applications, adjust the take-up pulley so the belt is just tight enough to avoid slipping on the drive pulley. Too much tension will reduce the life of the belt, lacing, and pulley bearings.

When conveying heavy product, add tension to the belt to increase the driving force instead of raising the pressure rollers. See "Adjusting Pressure Rollers" on page G - 18.

Accumulation applications develop lower line pressures with a higher belt tension. Driving force is increased, requiring less belt wrap at each carrier roller to convey the product. A smaller wrap angle reduces the drive on stalled rollers in the blocked section, thus reducing line pressure.

To determine belt tension, measure the catenary drop between return rollers over a 12' span (see Figure G - 14) and look up the corresponding tension in Table G 1 on page G - 17. If the return rollers are on 6' centers, remove one roller to measure the drop over a 12' span.

**WARNING:** Make sure the conveyor power is OFF when measuring the catenary drop of the return belt.

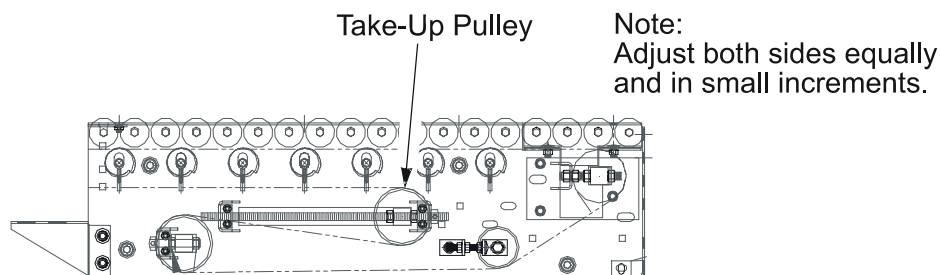


Figure G - 11 End Idler with Take-Up Pulley

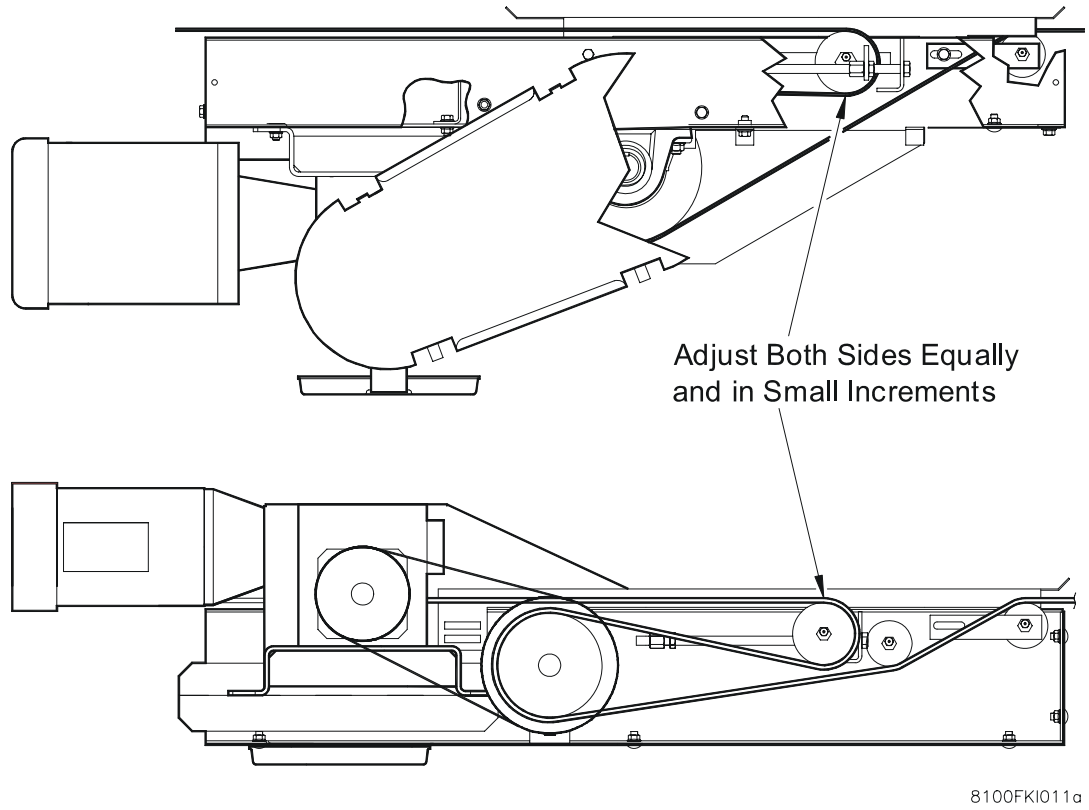


Figure G - 12 Intermediate Drive with Take-Up Pulley

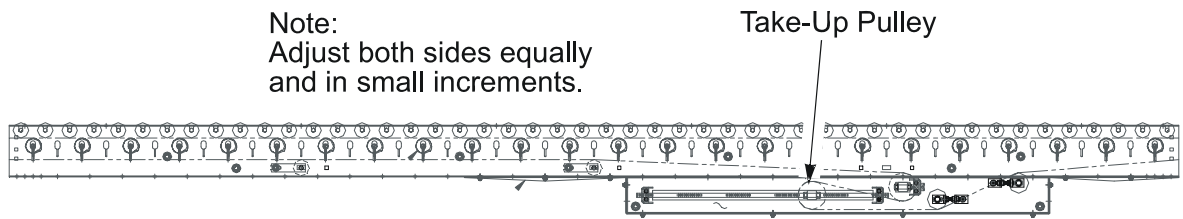


Figure G - 13 Auxiliary Take-Up

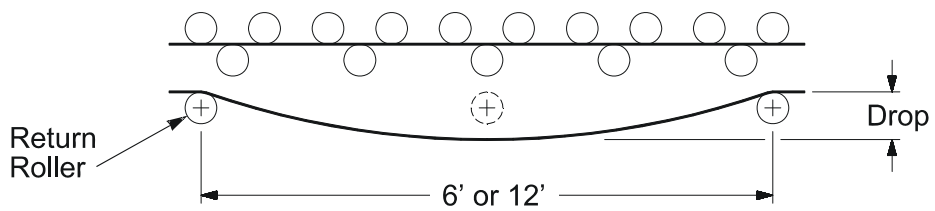


Figure G - 14 Measuring Catenary Drop

Table G 1 lists the Initial Belt Tension ( $T_0$  lbs.) from Return Belt Catenary Drop measured between Return Rollers across 12' span

Table G 1: Initial Belt Tension

Catenary Drop (in.)	Initial Belt Tension					
	Belt Width PVC90 CBS			Belt Width PVC90 FBS and PVC120 FBS (TM-529)		
	12"	10"	8"	12"	10"	8"
1/4	622	518	415	415	346	276
5/16	498	415	332	332	276	221
3/8	415	346	276	276	230	184
7/16	355	296	237	237	197	158
1/2	311	259	207	207	173	138
9/16	276	230	184	184	154	123
5/8	249	207	166	166	138	111
11/16	226	189	151	151	126	101
3/4	207	173	138	138	115	92
13/16	191	160	128	128	106	85
7/8	178	148	118	118	99	79
1	156	130	104	104	86	69
1 1/8	138	115	92	92	77	61
1 1/4	124	104	83	83	69	55
1 3/8	113	94	75	75	63	50
1 1/2	104	86	69	69	58	46
1 5/8	96	80	64	64	53	43
1 3/4	89	74	59	59	49	40
2	78	65	52	52	43	35
2 1/2	62	52	41	41	35	28
3	52	43	35	35	29	23

## Adjusting Pressure Rollers

Pressure Roller height is set by the Adjustment Cam located on the end of each roller axle, outside of the conveyor frame. See Figure G - 15.

- Use a 7/16" wrench to make the adjustment.
- Each cam notch raises or lowers the pressure roller 0.0095".
- The notch should always rest in the saddle of the H-clip.

## For Transportation and General Accumulation Applications

1. With the conveyor running, place the heaviest or most difficult to convey product on the on the conveyor at the infeed end to test the conveyor drive force.
2. If the product starts to travel without assistance, turn the cams to lower the pressure rollers by one notch until the product requires assistance to begin moving.
3. At this point, raise the pressure rollers one notch and note the setting.
4. Set all pressure rollers to this setting.
5. If the product stalls along the way, adjust the pressure roller at that point. Continue until it reaches the discharge of the conveyor (or shipping point).
6. If the line pressure is higher than desired, turn every other pressure roller down one cam notch. If the product again stalls at any point, return the pressure roller to its previous setting.
7. If the heaviest (or most difficult to convey) product travels slowly along the entire conveyor with the belt slipping on the carrier rollers, the pressure rollers have been set to their optimum operating height for minimum accumulation pressure.

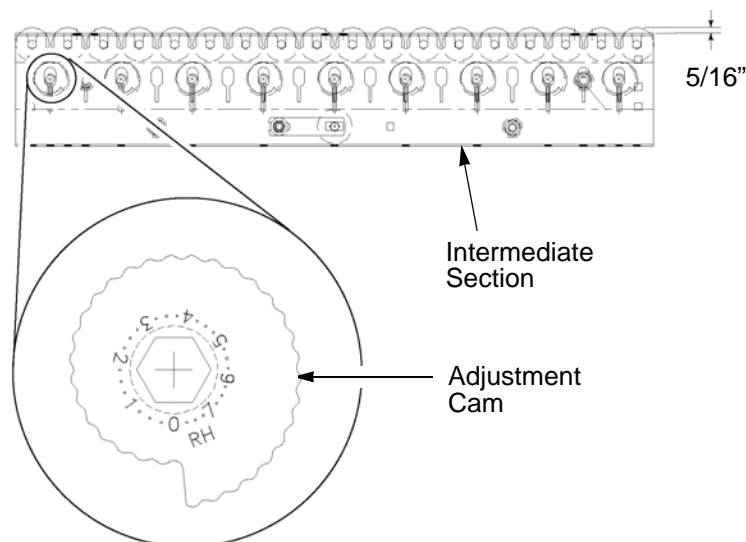


Figure G - 15 Individual Pressure Roller Adjustment



## For Minimum Pressure Accumulation Applications

1. Adjust the entire conveyor as described in “For Transportation and General Accumulation Applications”, on page G - 18,.
2. Select the heaviest (or most difficult to convey) product that is to be accumulated and place it at the infeed end of the blocked section.
3. With the conveyor running, walk the item the entire length of the blocked section and adjust each pressure roller individually until the product just starts to move without assistance.
4. Place the item at the infeed end of the blocked section again and see whether it travels the full length of the section without assistance.
5. If the product stalls along the way, adjust the pressure roller at that point.
6. Repeat steps #4 and #5 until the product reaches the discharge end of the blocked section.
7. If the line pressure is still too high, place the item at the infeed end of the blocked section again. Try turning every other pressure roller down one cam notch. If the product stalls at any point, return the pressure roller to its previous setting.
8. If the heaviest (or most difficult to convey product) travels slowly along the entire blocked section with the belt slipping on the carrier rollers, the pressure rollers have been set to their lowest operating height, which provides the minimum accumulation pressure.

## For Merging and Diverting Applications

1. Adjust the entire conveyor as described under the heading “For Transportation and General Accumulation Applications”, on page G - 18,.
2. Select the heaviest (or most difficult to convey) product that is to be merged or diverted and place it at the transition point of the merge or divert.
3. Raise the pressure rollers in the immediate area where the product is being merged or diverted one notch at a time until the product moves positively on or off the conveyor.

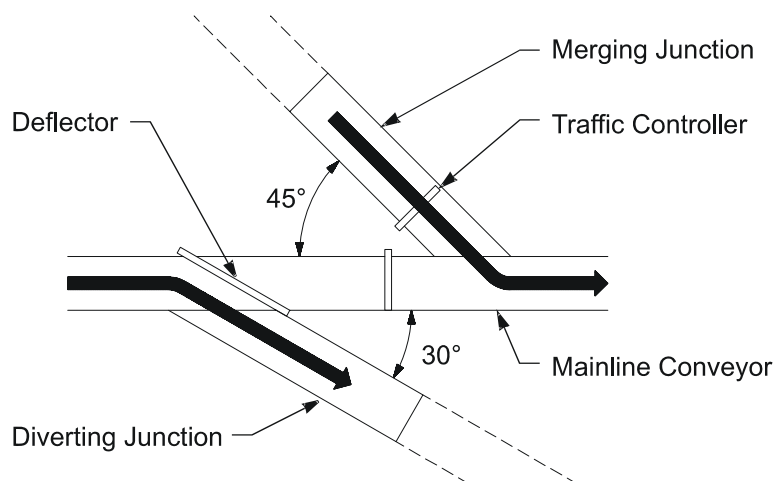


Figure G - 16 Merging and Diverting Applications

## Cutting the Belt

Use the following steps to cut the belt:

1. Allowing equal amounts of excess belting on each end, mark the required cut-length on one side of the belt. Turn the belt over so that the marked surface is the bottom side. With the belt laying flat and straight on the floor, bring the two overlapping ends together so that the cut marks are in line with each other.
2. Clamp the belt so that it does not shift.
3. Mark the centerline of the belt at three places (12" intervals) on each side of the planned cut.
4. Using a straight edge, mark the centerline of the belt by passing the line through as many center marks as possible.
5. Using a steel square, mark the cut line perpendicular to the drawn centerline.
6. Carefully cut both belts with a sharp knife or belt cutting tool.


**Recommended:** Corners on squared cut ends of the belt should be chamfered by cutting off a triangle measuring 1/2" (along the belt width) by 1-1/2" (measured along the belt length).

## Splicing the Belt

Splice the belt with the supplied lacing. Follow the lacing manufacturer's instructions.

## Replacing the Belt(s)

When replacing the belt(s), it may be beneficial in certain applications to splice the belt on a bias to reduce noise. When the belt is spliced on a bias, Intelligrated engineering requires the angle of the splice to be less than 7 degrees. Use the table below as a guide for common belt widths and dimensions. Each end of the belt must be cut at the exact same angle to ensure proper belt tracking. Be sure to take the offset measurement before trimming 1/4" from the corners, so as not to exceed the maximum bias angle.

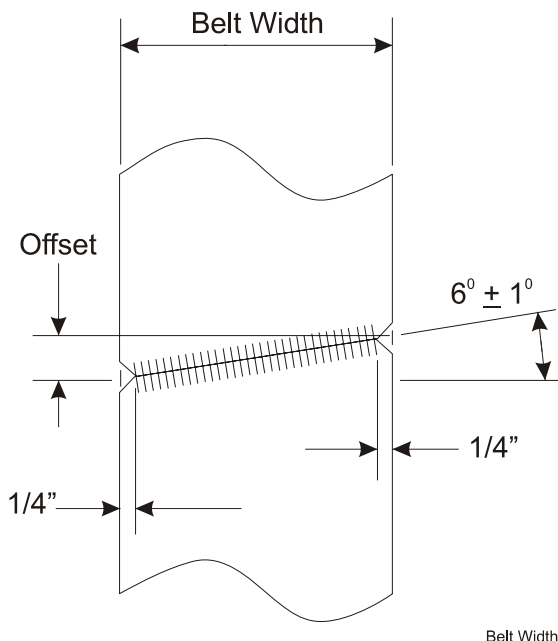

Common Belt Widths	Offset Dimension for 6 Degree Bias
6"	5/8"
8"	13/16"
10"	1-1/16"

---

## SECTION H: MAINTENANCE

### General

The recommended inspection and maintenance functions described in this Section apply to intermittent-duty conveyor applications. Additional functions may be required for continuous-duty operation or extreme environmental conditions.

### Maintenance Safety

---

---

**WARNING:** Maintenance must be performed only by qualified personnel who are trained in normal and emergency operations of the conveyor and who are knowledgeable of all safety devices, their locations, and functions.

Before performing maintenance on a conveyor, make certain that the conveyor's power disconnect is locked in the OPEN position and tagged to prevent accidental or unexpected application of power.

Do not perform maintenance while the conveyor is running unless specifically instructed to do so in this manual.

Note: Other than belt tracking and checking chain tension, it is NOT necessary to have the conveyor turned ON to perform any of the work described in this section.

---

---

Before restarting a conveyor:

- Remove all foreign objects from the conveyor.
- Be sure that all guards and safety devices are properly installed and working.
- Make sure that all persons are clear of the conveyor and are aware that the conveyor is about to be restarted.

### New Installations

All newly installed equipment should be inspected frequently and serviced as needed during the first 40 hours of operation. See "Initial Start-up and Run-in Period" on page H - 2. Thereafter, an appropriate maintenance program should be established and followed. See Table H 1.

### Maintenance Logs

Maintenance logs should be kept on all conveyor installations. Each log sheet should show:

- The date when an Inspection or Maintenance function was performed
- Details of the Inspection or Maintenance function
- Names of personnel performing the Inspection or Maintenance function

---

## Initial Start-up and Run-in Period

### Chain and Sprockets

Check the drive chain tension daily for the first week of operation, then monthly. Refer to the “Chain Maintenance” label on the inside of chain guard.

---

---

**WARNING:** Chain tension must be checked while the conveyor is running with the chain guard removed. When checking, be careful to stay clear of the chain and drive components.

---

---

### Power Unit Reducer

Grove and Reliance reducers are supplied with “lifetime” synthetic lubricants (Mobile SHC-634) that do not need to be changed after the unit is put into service.

**Note:** All reducers tend to run hot when first put into operation until the maximum break-in efficiency is reached (approximately 120 hours).

## Scheduled Inspections and Maintenance

Intervals indicated for performing inspections and maintenance should be considered for an 8 hour per day operation. An application may subject the equipment to conditions that would necessitate more frequent maintenance. This may best be determined by performing maintenance more frequently when the conveyor is first put into operation, and then lengthening the intervals based on experience.

Table H 1: Scheduled Maintenance

	Components	Item Check									
		Lubrication	Oil Level	Tension	Wear	Alignment	Fasteners	Set Screws	Proper	Physical	Operation
Weekly	Belt			X	X	X				X	
	Belt Lacing									X	
	Carrier/Pressure/Belt Return Rollers									X	X
	Electrical Devices								X	X	X
	General Structure						X			X	X
	Power Unit - Reducer		X								
	Safety Guards/Devices								X	X	X
Monthly	Bearings - External						X	X		X	
	Drive Chains and Sprockets	X		X	X	X	X	X		X	
	Timing Belts and Sprockets			X	X	X	X	X		X	X
	Take-up/Idler Pulleys									X	X
	Power Unit - Motor						X			X	
	Power Unit - Reducer						X			X	
	Pulley Lagging									X	
	Supports and Hangers						X			X	
Semi Annually 1040 hrs.	Bearings - External	X									
	Power Unit - Motor	X									
	Power Unit - Reducer	X	X								

---

## Daily Inspections

General walk-through inspections of the conveyor equipment during daily plant operation is recommended. Listen for unusual noises and carefully observing the system. For continuous duty applications, conduct conveyor inspections once each shift.

Check equipment safety guards, warning signs, lights, and alarms associated with the operation of the conveyor system and keep them in good condition to ensure the safety of all plant personnel. Any unusual conveyor noise, oil leaks, and operational problems should be immediately reported and promptly corrected.

---

## Weekly Inspections

### Belting

Check that the belt is tracking properly along the entire conveyor length. Make appropriate adjustments of snub rollers, etc. If required; check that the belt tension is sufficient to prevent the belt from slipping on the drive pulley under the maximum required load. Remove any buildup of product spillage.

### Belt Lacing

Check the lacing for damage or protrusions which might cause damage to the conveyor or product. If the lacing needs to be replaced and the take-up permits, cut both ends of the belt square and re-splice. If the take-up does not permit, cut and lace in a short length of belting (1'-0" long minimum).

### Carrier, Pressure, and Belt Return Rollers

Check that all rollers are in place and turning freely. Remove any buildup of dirt and/or product spillage. Take care in keeping cleaning materials from coming in contact with the ball bearings.

### General Structure and Operation

Check the conveyor's physical condition, looking for loose fasteners, damaged or wearing components. Listen for unusual noises such as squeaking bearings, chains jumping sprockets, etc.

Check that the conveyed product travels along the length of the conveyor without obstruction of hesitation.

### Power Unit Reducer

Check for signs of oil leakage on the floor and/or in the drip pan. If leakage persists or the amount of leakage is significant, repair or replace the unit. Until corrections are made, closely monitor the unit's oil level.

### Safety Guards and Devices

Check that the safety guards, warning signs, light, and alarms are in place and in proper working condition. Check that all Emergency Stop pull-cords and/or push buttons are functioning properly.

### Electrical Devices

Photocells, proximity sensors, limit switches, etc. should be periodically inspected and adjusted as needed. Lenses and reflectors on photoelectric devices should be wiped clean on a daily basis. For additional maintenance provisions, refer to the appropriate vendors instructions provided.

---

## Monthly Maintenance

### External Bearings

Check that all mounting bolts, set screws, etc., are securely tightened, and that no lubricant is coming out of the seals. Listen for any unusual noises.

### Internal Bearings

Check that the bearings are fully-pressed into the roller tube, and that the lubricant is not coming out of the seals. Listen for any unusual noises.

### Power Unit Motor

Remove any build-up of dirt/dust around the motor vent openings. Check that all mounting bolts are securely tightened and that the motor lead wires are securely connected.

Unless specified, wick-oil sleeve bearings should be lubricated every 2000 to 4000 hours. After the first 4000 hours of operation lubricate with 3 or 4 drops of light grade mineral oil or SAE10W motor oil. Refer to the motor lubrication plate or vendors instruction tag(s).

### Power Unit Reducer

Check the oil level while the unit is warm, but not running. If required, add oil through the "fill" hole until the oil begins to run out of the "oil level" hole. All standard reducers are filled by the manufacturer with a synthetic gear lubricant. When replenishing the oil, be sure to use the same brand and type. DO NOT MIX lubricants. For further information, refer to the instruction tag attached to the unit.

To prevent oil leakage, apply Teflon tape or Permatex to the threads of the fill plug and oil level plug before reinstalling. Properly install and tighten the plugs before putting the unit back into operation.

### Power Unit Sprockets

Check sprocket alignment by placing a straight edge across the face of the sprockets simultaneously.

Inspect chain sprockets for need of lubrication. If required, lubricate the chain lightly with SAE 30 oil. DO NOT use grease. Also check teeth for wear. Realign if required,

### Power Unit Chains

Lubricate and check tension per instructions given on the "Chain Maintenance" label located on the inside of the chain guard. Remove any dirt or dried oil with a kerosene soaked rag.



## Power Unit Timing Belts


Adjust reducer to remove any belt slack and achieve a snug belt tension.

Use the following steps to check belt tension:

1. Measure the center distance between the driver and driven sprockets to determine the belt span length. See Figure H - 1.
2. Determine the correct deflection for the span as follows: Deflection = Span Length ÷ 64.
3. Use a spring-scale tension checker (possible source Browning) to determine the force required to produce the required deflection. See Table H 2.

Table H 2: Timing Belt Deflection/Force

Belt		Deflection
Pitch	Width	Force
8mm	12mm	7 lbs.
	22mm	15 lbs.
	35mm	20 lbs.
Pitch	42mm	23 lbs.

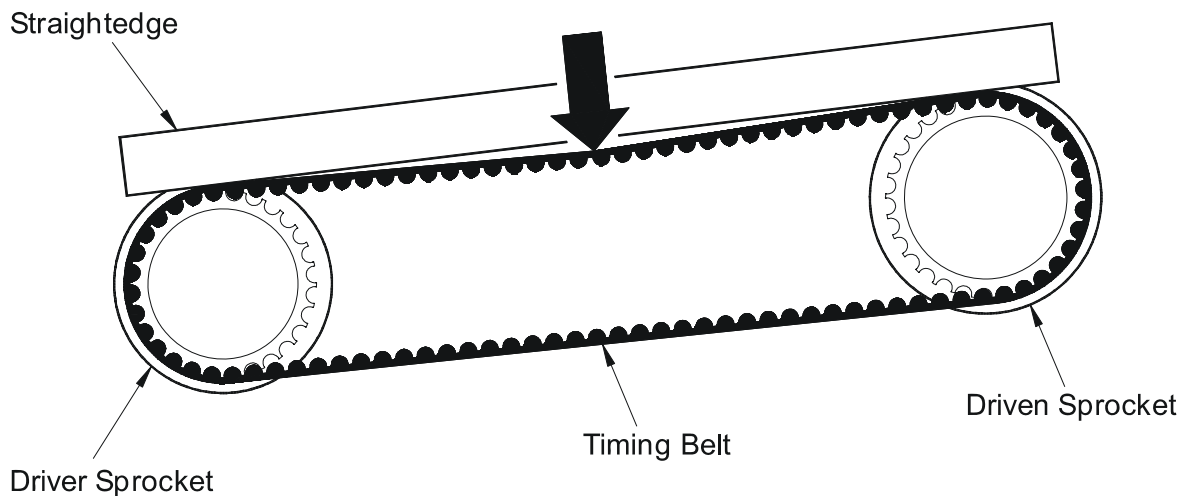

8100FKI013a

Figure H - 1 Measuring Timing Belt Deflection

## Drive Sprockets

Check the alignment by placing a straight-edge across the face of both sprockets simultaneously. Also check for wear on the sprocket teeth and side bars of the chain. If loose, tighten the sprocket fasteners.

## Drive Pulley and Lagging

Check the pulley alignment and make certain that all mounting bolts are securely tightened. Check for worn or damaged lagging on the drive pulley. Repair or replace as required.

## Supports and Hangers

Check that all floor supports and/or ceiling hangers are in good physical condition and have not been damaged. Check that all fasteners are securely tightened and that none are missing.

---

## Semi-Annual Maintenance

### Power Unit Motor

Units up to 5 HP are lubricated for life. For 7.5 HP motors, refer to the manufacturer's motor lubrication plate or operating instruction tag wired to the motor.

### Power Unit Reducer

Check that all fasteners are secure.

### Bearings - External


All external bearings have lubed-for-life bearing cartridges, and do not require periodic lubrication.

If desired, the bearings may be re-lubricated using the grease-fitting that is provided in all bearing housings. Once grease is added, the bearing must be re-lubricated every 6 months with a lithium-based ball bearing grease or compatible grease conforming to NLG1 Grade 2 consistency.

Add the grease slowly and sparingly while the pulley is rotating until a slight showing of grease forms around the seals. **DO NOT OVER LUBRICATE.** Too much grease may damage the seals. If a bearing is over greased; remove the fitting to allow the excess grease to escape. Replace the fitting and wipe clean before putting the conveyor back into operation.

## Replacing the Belt(s)

When replacing the belt(s), it may be beneficial in certain applications to splice the belt on a bias to reduce noise. When the belt is spliced on a bias, Intelligrated engineering requires the angle of the splice to be less than 7 degrees. Use the table below as a guide for common belt widths and dimensions. Each end of the belt must be cut at the exact same angle to ensure proper belt tracking. Be sure to take the offset measurement before trimming 1/4" from the corners, so as not to exceed the maximum bias angle.

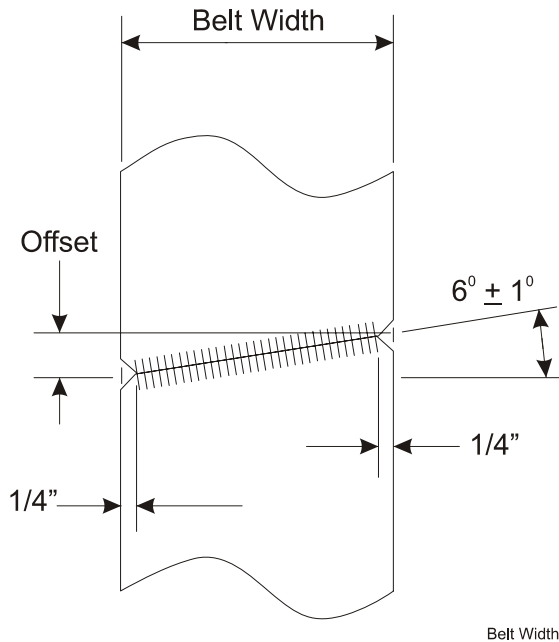

Common Belt Widths	Offset Dimension for 6 Degree Bias
6"	5/8"
8"	13/16"
10"	1-1/16"

## Troubleshooting

Basic troubleshooting provisions are outlined below. For troubleshooting the specific conveyor system installed, always check the maintenance information. Basic troubleshooting is outlined in Table H 3.

**CAUTION:** Do not clear jams or reach into any unit before first turning off the equipment power source(s) and making certain that all moving parts are fully stopped. To avoid personal injury or equipment damage, lockout and tag the conveyor operation control(s) before attempting to correct any malfunction.

Table H 3: Basic Troubleshooting Problems and Solutions

Problem	Cause	Solution
Conveyor does not start.	Electrical power shut off or control circuit NOT energized.  System control devices (photo-cells, limit switches, etc.) out of adjustment or defective.  Motor overload block open.	Check that system control panel(s) are energized. Be certain emergency stop devices are not activated.  Adjust or replace.  Check conveyor drive system and overload sizing before resetting.
Conveyor shuts off.	Accumulation photocell or other control device(s) actuated or defective.  Emergency stop activated.  Power or component failure at system control center.  Motor overload.	Check conveyor accumulation or obstruction of control device; replace control device if defective.  Correct condition and reset according to control logic.  Refer to vendor manuals.  Check conveyor drive system and overload sizing before re-starting.
One part of belt creeps to one side.	Belt ends not cut square.	Cut the belt ends square.

Table H 3: Basic Troubleshooting Problems and Solutions (Continued)

Problem	Cause	Solution
Entire belt creeps to one side.	<p>Belt shifts to low side. The base structure or conveyor frame is not level or is crooked.</p> <p>Alignment of pulleys; drive, tail, pulleys, or snub rollers are out of line or not perpendicular with the center line of the conveyor.</p> <p>Underside of the belt is dirty.</p>	<p>Stretch a string along the edge of the frame, check alignment of the frame and correct. Next, check the level of support structure.</p> <p>Square the pulleys and snub rollers.</p> <p>Remove foreign matter, because it creates a new crown on the pulley or roller face, adversely affecting the tracking.</p>
Belt creeps to one side in (discharge) pulley area.	<p>Belt is not tracked properly in return run.</p> <p>The belt does not track properly in the conveyor's Intermediate Drive (or auxiliary take-up) unit.</p>	Adjust the belt-return rollers and/or snub rollers.
Belt creeps to one side in (infeed) pulley area.	<p>The pressure and carrier rollers are not square to the frame rails.</p> <p>The end pulley is out of alignment (not perpendicular with the center line of the conveyor).</p>	<p>Square the intermediate sections.</p> <p>Square the end rollers.</p>
Belt fasteners pulling out.	<p>Fasteners are incorrect size</p> <p>Too much tension on belt.</p>	<p>Re-lace the belt with proper size fasteners.</p> <p>Reduce tension to the minimal amount required to prevent slipping on the drive pulley.</p>



---

## SECTION I: PARTS IDENTIFICATION

### General Information

The purpose of this section is to identify the critical replacement parts required for a solid preventative maintenance program and to minimize the chances for extended down time.

The following pages illustrate the location of these recommended spare parts as they apply to each particular unit. Keep in mind that these illustrations apply to the standard product line only.

### Intermediate Sections





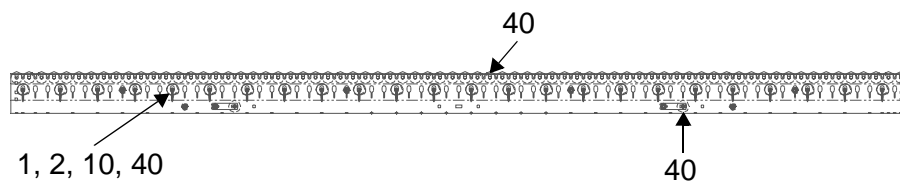


Figure I - 1 Intermediate Sections (12'-0" Shown)

## End Idler Section with Take-Up

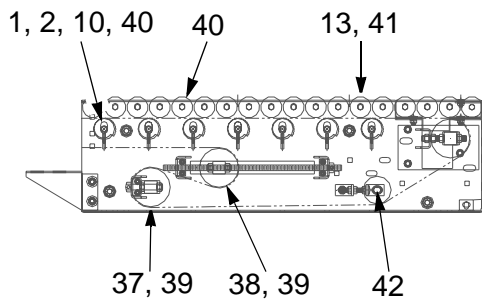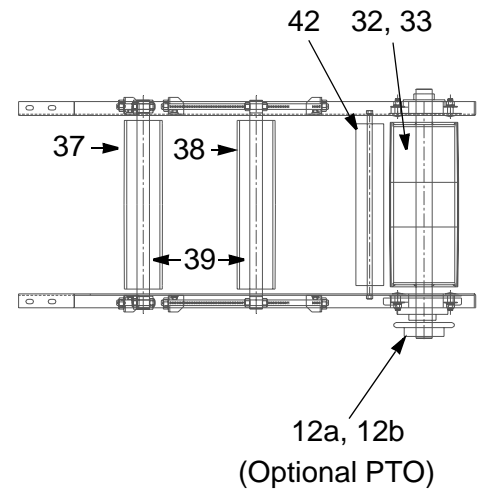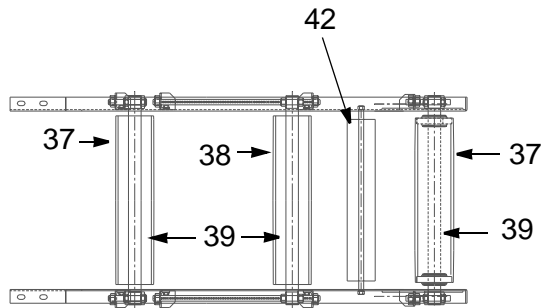

Series 600 and 800 (3.5")  
End Idler with Take-Up

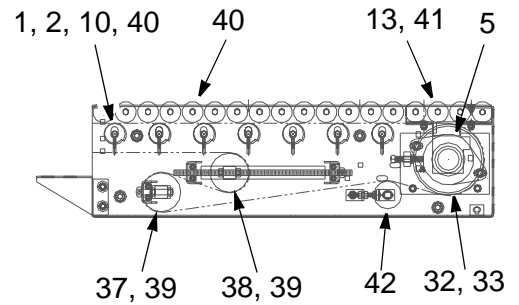

Series 600 and 800 (6")  
End Idler with Take-Up  
(Shown with PTO)

Figure I - 2 End Idler Sections with Take-Ups



**End Idler Section**


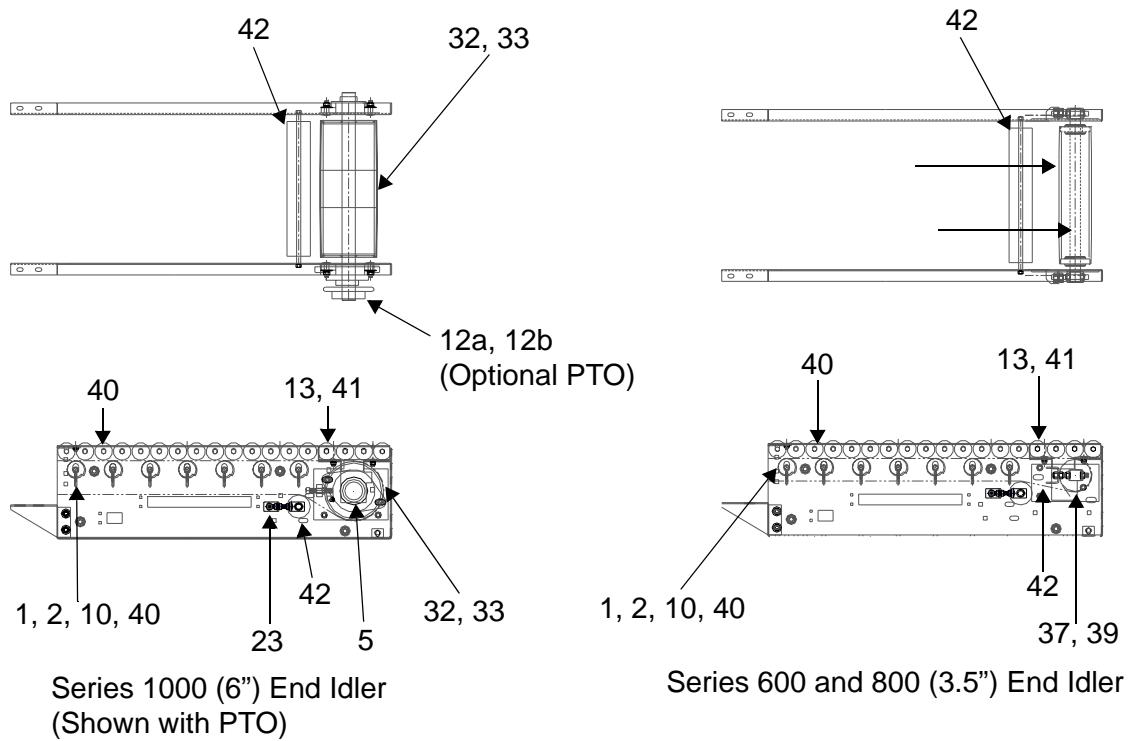


Figure I - 3 End Idler Sections

# Intermediate Drives


## SA2000 - Intermediate Section

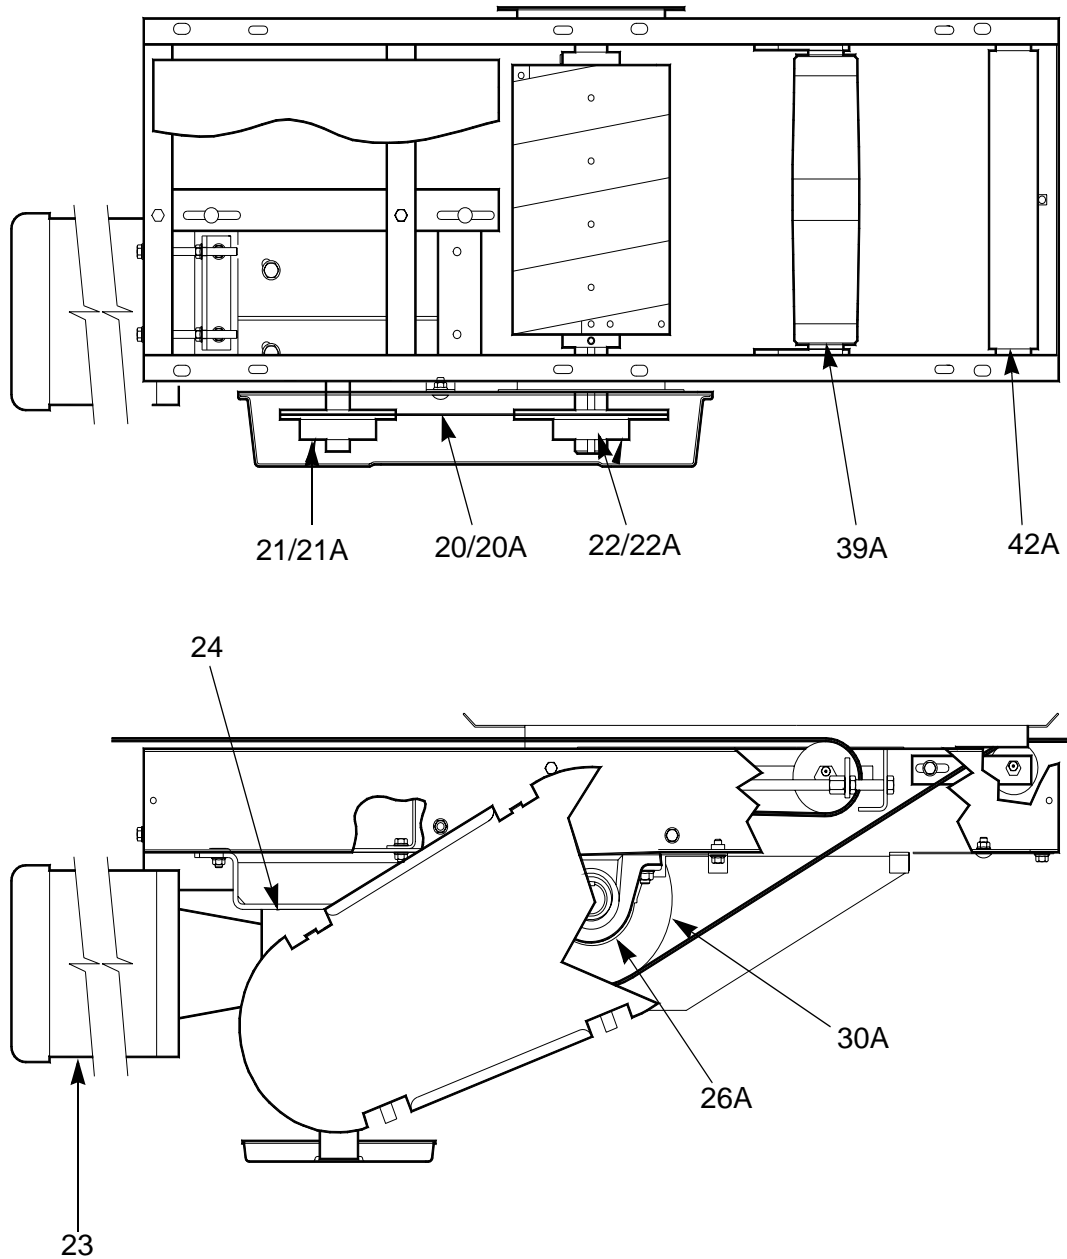

8100FKI005a

Figure I - 4 SA2000 - Intermediate Section


SA2001 - Intermediate Section - Low Profile

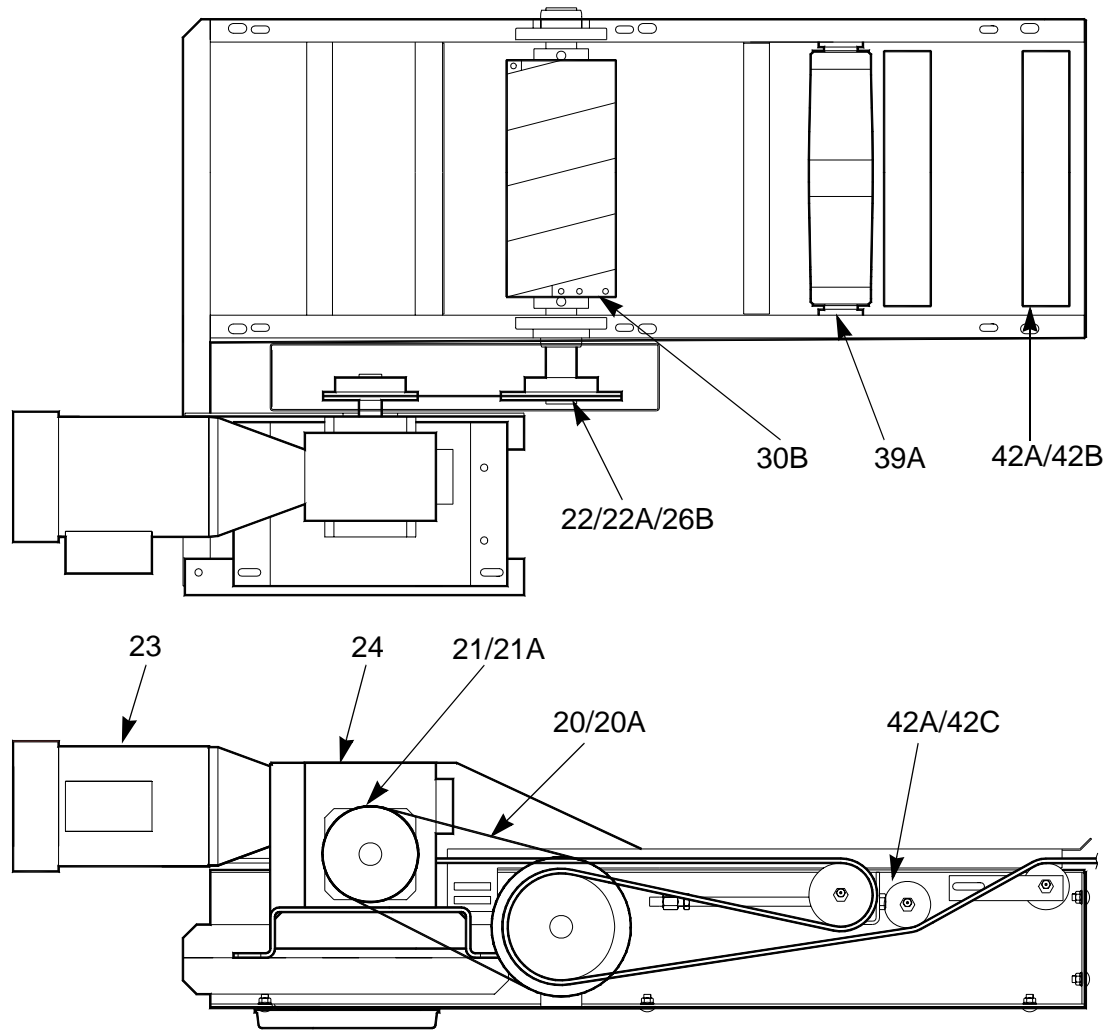

8100FK1006

Figure I - 5 SA2001 - Intermediate Section - Low Profile

# End Drive Sections

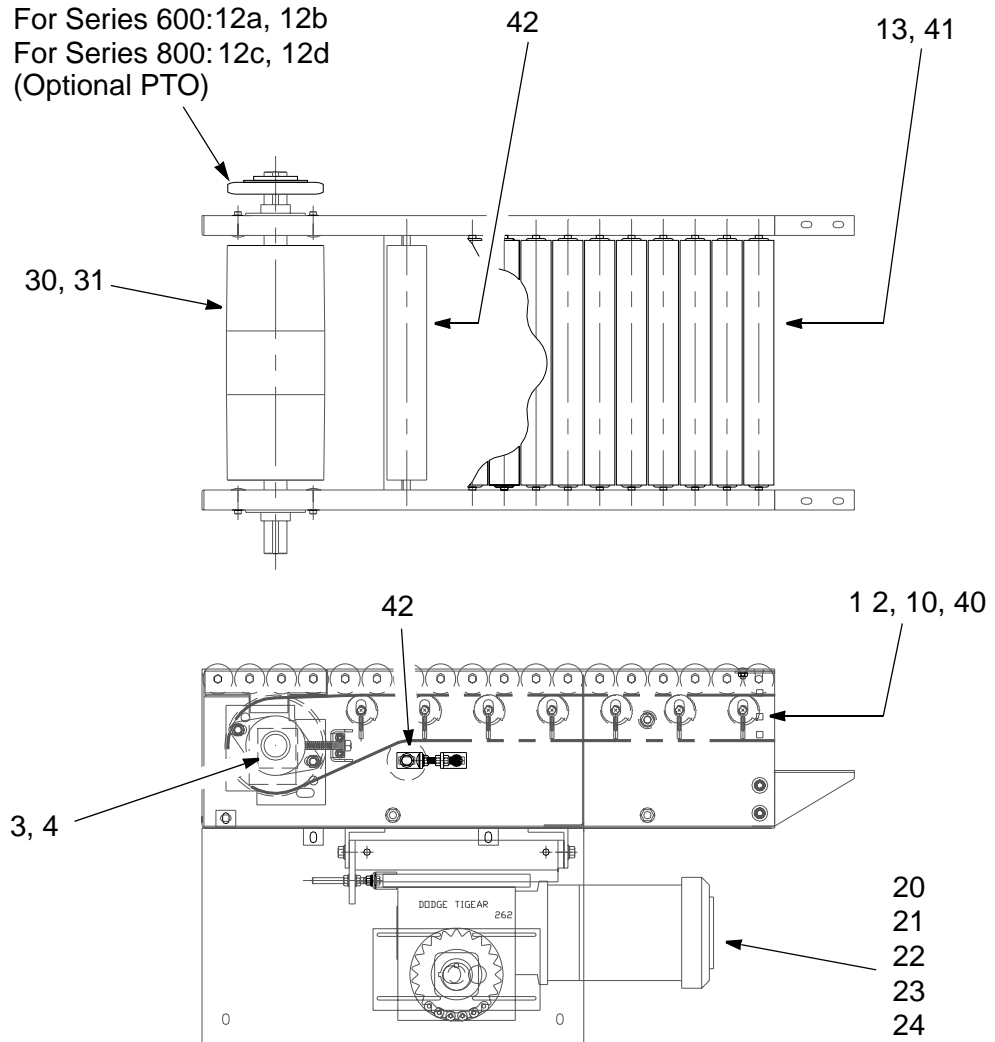

Series 600 and Series 800 End Drive  
 (Series 600 with PTO Shown)

Figure I - 6 End Drive Sections

---

## Auxiliary Take-Up Sections

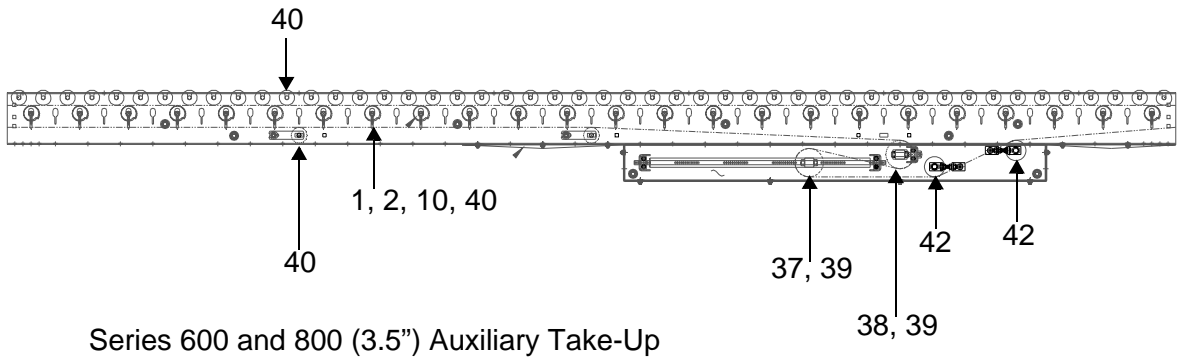


Figure I - 7 Auxiliary Take-Up Section

## Non-Width Related Parts

Key No.	Description	Part No.
1	Adjuster, EZ Cam, Right Hand	500883
2	Adjuster, EZ Cam, Left Hand	500884
3	Bearing, Flange, 2-Bolt, 1-7/16" BR - Pressure-Lubricated	400987
4	Bearing, Flange, 2-Bolt, 1-11/16" BR - Pressure-Lubricated	400990
5	Bearing, Flange, 2-Bolt, 1-15/16" BR - Pressure-Lubricated	400995
6	Bearing, Flange, 4-Bolt, 1-15/16" BR - Pressure-Lubricated	400970
7	Bearing, Take-Up, 1-15/16" BR (5/16" Wide Slot)	700145
7a	Bearing, Take-Up, 1-15/16" BR (11/16" Wide Slot)	700161
8a	Belting, PVC 90 FBS, 8" Wide (Specify Footage)	190130
	Belting, PVC 90 FBS, 10" Wide (Specify Footage)	190226
	Belting, PVC 90 FBS, 12" Wide (Specify Footage)	190355
8b	Belting, PVC 90 CBS, 8" Wide (Specify Footage)	327108
	Belting, PVC 90 CBS, 10" Wide (Specify Footage)	327110
	Belting, PVC 90 CBS, 12" Wide (Specify Footage)	327112
8c	Belting, PVC 120 FBS TrackMate-529 Nonwoven, 8" Wide (Specify Footage)	190810
	Belting, PVC 120 FBS TrackMate-529 Nonwoven, 10" Wide (Specify Footage)	190811
	Belting, PVC 120 FBS TrackMate-529 Nonwoven, 12" Wide (Specify Footage)	190812
9a	Belt Lacing with Pin - Clipper #1A (8" wide)	190711
	Belt Lacing with Pin - Clipper #1A (10" wide)	190717
	Belt Lacing with Pin - Clipper #1A (12" wide)	190712
9b	Belt Lacing with Pin - Clipper #2SP (8" wide)	190813
	Belt Lacing with Pin - Clipper #2SP (10" wide)	190814
	Belt Lacing with Pin - Clipper #2SP (12" wide)	190815
9c	Belt Lacing with Pin - Alligator #7 (8" wide)	190876
	Belt Lacing with Pin - Alligator #7 (10" wide)	190878
	Belt Lacing with Pin - Alligator #7 (12" wide)	190880
10	H-Clip, EZ Cam	640153
12a	PTO Sprocket - H50BTL21	1225021
12b	PTO Hub (#1610), 1-7/16" Bore with Key	230950
12c	PTO Sprocket - H50BTL22	1225022
12d	PTO Hub (#1610), 1-7/16" Bore with Key	230952

Key No.	Description	Part No.
13	O-Ring, 2C – 3/16" / 8"	000025
20	Chain - RC-50	20-0970
	Chain - RC-50 Connector Link	20-0040
	Chain - RC-60 (High-Speed)	20-0987
	Chain - RC-60 Connector Link	20-0986
	Chain - RC-80 (High Speed)	20-0989
	Chain - RC-80 Connector Link	20-0070
	Chain - RC-100 (High Speed)	20-1000
	Chain - RC-100 Connector Link	20-0080
20A	Timing Belt - Pitch / Width / Length	
	8mm / 21mm / 1200mm	7001504
	8mm / 21mm / 1280mm	7001506
	8mm / 36mm / 1200mm	7001512
	8mm / 36mm / 1280mm	7001514
	14mm / 37mm / 1400mm	7001519
26A	Bearing, 2-Bolt Flange, 1-11/16" BR - Pressure Lubricated (SA2000)	7522411
26B	Bearing, Pillow Block, 1-11/16" BR - Pressure Lubricated (SA2001)	7712387

Key No.	Item		Part Number					
	Chain Sprocket (Power Unit - Driver)							
	Size - Teeth - Belt Width	Sprocket Hub Type (TL Bushing No.)	Reducer Output Shaft Diameter					
.875			1.000	1.125	1.250	1.500	1.875	
21	Series 600 and 800 - End Drive							
	RC50 - 11T	Type B Hub	745505					
	RC50 - 13T	Type B Hub	745513	745512	745510			
	RC50 - 14T	Type B Hub			745514			
	RC50 - 17T	Type B Hub			745517			
	RC60 - 9T	Type B Hub	745100					
	RC60 - 10T	Type B Hub	745101		745102			
	RC60 - 11T (TL Bushing)	Type B Hub	745111	745110	745112			
		Type TL Hub (1008)	745631		745631			
	RC60 - 13T (TL Bushing)	Type B Hub			745133			
		Type TL Hub (1210)	745633	745633	745633			
	RC60 - 14T (TL Bushing)	Type B Hub			745142		745144	
		Type TL Hub (1210)	745634	745634	745634		745634	
	RC60 - 15T (TL Bushing)	Type TL Hub (1610)	745635	745635	745635		745635	
			230746	230747	230748		230753	
	RC60 - 16T (TL Bushing)	Type B Hub					745165	
		Type TL Hub (1610)					745636	
	RC60 - 17T (TL Bushing)	Type B Hub					230753	
		Type TL Hub (1610)			745637		745637	
	RC60 - 18T (TL Bushing)	Type TL Hub (1610)			230748		230753	
			745638	745638	745638		745638	
RC60 - 19T (TL Bushing)	Type TL Hub (1610)			230748		230753		
		745639	745639	745639		745639		
RC60 - 20T (TL Bushing)	Type TL Hub (2012)					745640		
						230785		
RC60 - 21T (TL Bushing)	Type TL Hub (2012)					745641		
						230785		



Key No.	Item		Part Number					
	Chain Sprocket (Power Unit - Driver)							
	Size - Teeth - Belt Width	Sprocket Hub Type (TL Bushing No.)	Reducer Output Shaft Diameter					
.875			1.000	1.125	1.250	1.500	1.875	
21	RC60 - 22T (TL Bushing)	Type TL Hub		745642	745642		745642	
		(2012)		230777	230778		230785	
	RC60 - 25T (TL Bushing)	Type TL Hub					745645	
		(1008)????					_____	
	RC60 - 26T (TL Bushing)	Type TL Hub					745646	
		(1210)					_____	
	RC60 - 29T (TL Bushing)	Type TL Hub					745649	
		(1610)					230753	
	RC60 - 30T (TL Bushing)	Type TL Hub					745650	
		(1610)					230753	
	RC80 - 11T	Type B Hub					745313	
	RC80 - 12T (TL Bushing)	Type B Hub					745322	
		Type TL Hub					745683	
	(1615)						230766	
	RC80 - 13T (TL Bushing)	Type B Hub					745333	
		Type TL Hub					745684	
	(1615)						230766	
	RC80 - 14T (TL Bushing)	Type B Hub					745342	
Type TL Hub						745685		
(1615)						230766		
RC80 - 16T (TL Bushing)	Type B Hub					745360		
	Type TL Hub						745687	
(2012)							230786	
RC80 - 17T (TL Bushing)	Type B Hub						745372	
	Type TL Hub						745688	
(2012)							230786	
RC80 - 18T (TL Bushing)	Type TL Hub						745689	
	(2012)						230786	
RC80 - 19T (TL Bushing)	Type TL Hub						745690	
	(2012)						230786	
RC80 - 20T (TL Bushing)	Type TL Hub						745691	
	(2517)						230798	
RC80 - 21T (TL Bushing)	Type TL Hub						745692	
	(2517)						230798	
RC80 - 23T (TL Bushing)	Type TL Hub						745694	
	(2517)						230798	

Key No.	Item		Part Number						
	Chain Sprocket (Power Unit - Driver)								
	Size - Teeth - Belt Width	Sprocket Hub Type (TL Bushing No.)	Reducer Output Shaft Diameter						
.875			1.000	1.125	1.250	1.500	1.875		
21	RC100 - 10T	Type B Hub						745500	
	RC100 - 11T	Type B Hub						745432	
		Type TL Hub						745718	
		(SDS)						230759	
	RC100 - 12T	Type B Hub						745440	
		Type TL Hub						745719	
		(SDS)						230759	
	RC100 - 13T	Type TL Hub						745723	
		(2012)						230786	
	RC100 - 14T	Type TL Hub						745758	
		(2517)						230798	
	SA2000 / 2001 - Intermediate / Low-Profile Drive								
	RC60 - 16T (TL Bushing)	Type TL Hub (1610)		7788120	7788120	7788120	7788120		
				7115210	7115213	7115223	7115228		
	RC60 - 19T (TL Bushing)	Type TL Hub (1610)		7742721	7742721	7742721	7742721		
				7115210	7115213	7115223	7115228		
	RC60 - 20T (TL Bushing)	Type TL Hub (2012)		7743918	7743918	7743918	7743918		
				7115235	7115228	7115227	7721059		
	RC60 - 21T (TL Bushing)	Type TL Hub (2012)		7120512	7120512	7120512	7120512	7120512	
				7115235	7115228	7115227	7721059	7115234	
	RC60 - 22T (TL Bushing)	Type TL Hub (2012)		7000092	7000092	7000092	7000092		
			7115235	7115228	7115227	7721059			
RC60 - 23T (TL Bushing)	Type TL Hub (2012)		7125294	7125294	7125294	7125294			
			7115235	7115228	7115227	7721059			
RC60 - 25T (TL Bushing)	Type TL Hub (2012)		7730801	7730801	7730801	7730801	7730801		
			7115235	7115228	7115227	7721059	7115234		

Key No.	Item		Part Number					
	Chain Sprocket (Power Unit - Driver)							
	Size - Teeth - Belt Width	Sprocket Hub Type (TL Bushing No.)	Reducer Output Shaft Diameter					
.875			1.000	1.125	1.250	1.500	1.875	
21A	Timing-Belt Sprocket (Power Unit - Driver)							
	8mm-30T-21 (TL Bushing)	Type TL Hub (1108)	7001533					
			7001513					
	8mm-32T-21 (TL Bushing)	Type TL Hub (1210)	7001534	7001534				
			7200560	7115208				
	8mm-32T-36 (TL Bushing)	Type TL Hub (1210)				7001551		
						7115207		
	8mm-34T-21 (TL Bushing)	Type TL Hub (1610)	7001535	7001535	7001535			
			7115210	7115213	7115223			
	8mm-34T-36 (TL Bushing)	Type TL Hub (1210)				7001552		
						7115207		
	8mm-36T-21 (TL Bushing)	Type TL Hub (1610)	7001536	7001536				
			7115210	7115213				
	8mm-36T-36 (TL Bushing)	Type TL Hub (1610)			7001553			
					7115213			
	8mm-38T-21 (TL Bushing)	Type TL Hub (1610)	7001537	7001537	7001537			
			7115210	7115213	7115223			
	8mm-38T-36 (TL Bushing)	Type TL Hub (1610)			7001554	7001554	7001554	
					7115213	7115223	7732428	
	8mm-40T-21 (TL Bushing)	Type TL Hub (2012)	7001538	7001538	7001538			
			7115235	7115228	7115227			
	8mm-40T-36 (TL Bushing)	Type TL Hub (2012)				7001555	7001555	
						7115227	7115234	
	8mm-42T-21 (TL Bushing)	Type TL Hub (2012)	7001539	7001539	7001539			
			7115235	7115228	7115227			
	8mm-42T-36 (TL Bushing)	Type TL Hub (2012)			7001556			
					7115228			
	8mm-45T-21 (TL Bushing)	Type TL Hub (2012)	7001540	7001540	7001540			
		7115235	7115228	7115227				
8mm-48T-21 (TL Bushing)	Type TL Hub (2012)	7001541	7001541	7001541				
		7115235	7115228	7115227				
8mm-48T-36 (TL Bushing)	Type TL Hub (2012)				7001558			
					7115227			
8mm-50T-21 (TL Bushing)	Type TL Hub (2012)	7001542	7001542	7001542				
		7115235	7115228	7115227				

Key No.	Item		Part Number					
	Chain Sprocket (Power Unit - Driver)							
	Size - Teeth - Belt Width	Sprocket Hub Type (TL Bushing No.)	Reducer Output Shaft Diameter					
.875			1.000	1.125	1.250	1.500	1.875	
21A	14mm-28T-37 (TL Bushing)	Type TL Hub (2012)					7001566	7001566
							7721059	7115234
	14mm-30T-37 (TL Bushing)	Type TL Hub (2517)				7001568	7001568	7001568
						7001524	7756668	7174980
	14mm-32T-37 (TL Bushing)	Type TL Hub (2517)					7001570	7001570
							7756668	7174980
	14mm-34T-37 (TL Bushing)	Type TL Hub (2517)					7001572	7001572
							7756668	7174980
	14mm-36T-37 (TL Bushing)	Type TL Hub (2517)					7001574	7001574
							7756668	7174980
	14mm-40T-37 (TL Bushing)	Type TL Hub (3020)				7001578		
						7001527		

Key No.	Item	Part Number			
22	Chain Sprocket (Pulley Driven)				
	Size - Teeth - Belt Width	Sprocket Hub Type (TL Bushing No.)	<b>Reducer Output Shaft Diameter</b>		
			1.187"	1.427"	1.675"
	Series 600 and 800 - End Drive				
	RC50 - 13T	Type B Hub	745511		
	RC60 - 21T  (TL Bushing)	Type B Hub		745207	
		Type TL Hub (2012)		745641	
				230781	
	RC60 - 27T  (TL Bushing)	Type B Hub			745270
		Type TL Hub (2012)			745647
					230782
	RC80 - 15T  (TL Bushing)	Type B Hub		745350	
		Type TL Hub (1615)		745686	
				230769	
	RC80 - 19T  (TL Bushing)	Type B Hub			745392
		Type TL Hub (2012)			745690
					230782
	RC100 - 15T  (TL Bushing)	Type TL Hub			745725
		(2517)			230793
	SA2000 / 2001 - Intermediate / Low Profile				
RC60 - 26T  (TL Bushing)	Type TL Hub			7717361	
	(2012)			7115238	
RC60 - 32T  (TL Bushing)	Type TL Hub			7742328	
	(2012)			7115238	

Key No.	Item	Part Number			
22A	Timing-Belt Sprocket (Pulley - Driven)				
	8mm-71T-21 (TL Bushing)	Type TL Hub (2517)		7001548 7115239	
	8mm-71T-36 (TL Bushing)	Type TL Hub (2517)		7001563 7115239	
	8mm-75T-21 (TL Bushing)	Type TL Hub (2517)		7001549 7115239	
	8mm-75T-36 (TL Bushing)	Type TL Hub (2517)		7001564 7115239	
	8mm-80T-21 (TL Bushing)	Type TL Hub (2517)		7001550 7115239	
	8mm-80T-36 (TL Bushing)	Type TL Hub (3020)		7001565 7000084	
	14mm-50T-37 (TL Bushing)	Type TL Hub (3020)		7001582 7000084	
	14mm-53T-37 (TL Bushing)	Type TL Hub (3020)		7001583 7000084	
	14mm-56T-37 (TL Bushing)	Type TL Hub (3525)		7001584 7000085	
	Note: "B" = Sprocket with finished bore. "TL" = Sprocket with taper-bore bushing. "H" = Sprocket with split taper bushing.				

Key No.	Part Description	Part Number			
	C-Face Motor	Baldor		Reliance	
		Motor	Brake Motor	Motor	Brake Motor
23	208-230/460V-3PH-60HZ - Standard Efficiency				
	1/2HP 56C	7155562	7742489	7001600	7001631
	3/4HP 56C	7150592	7150962	7001601	7704084
	1HP 56C	7745139	7716179	7001602	7172635
	1-1/2HP 145C	7778225	7716197	7001603	7001511
	2 HP 145TC	7274611	7325286	7001604	7704091
	3 HP 182TC	7747525	7747295	7001605	7704708
	5 HP 184TC	7747294	7817618	7001606	7001612
	7-1/2 HP 213TC	7329946	7005792	7001607	7001613
	208-230/460V-3PH-60HZ - Premium Efficiency				
	1/2HP 56C	7002040	7002030	7830000	7001621
	3/4HP 56C	7002041	7002031	7001615	7001622
	1HP 56C	7002042	7002032	7888089	7001623
	1-1/2HP 145C	7002043	7002033	7001632	7001625
	2 HP 145TC	7002044	7002034	7001617	7001626
	3 HP 182TC	7002045	7002035	7001633	7001627
	5 HP 184TC	7002046	7002036	7001618	7001628
	7-1/2 HP 213TC	7002047	7002037	7001619	7001629
	575V-3PH-60HZ - Standard Efficiency				
	1/2HP 56C	7717583	-	7002088	-
	3/4HP 56C	7717584	7152666	7002089	7002090
	1HP 56C	7717598	7717586	-	7002091
	1-1/2HP 145C	7331614	-	-	-
	2 HP 145TC	7763322	-	-	-
	3 HP 182TC	7362599	-	-	-
	5 HP 184TC	7866559	-	-	-
	7-1/2 HP 213TC	7005793	-	-	-
	575V-3PH-60HZ - Premium Efficiency				
	1/2HP 56C	7002050	7002060	7001621	7002092
	3/4HP 56C	7002051	7002061	7001622	7002093
	1HP 56C	7002052	7002062	7001623	7002094
	1-1/2HP 145C	7002053	7002063	7001625	7002095
	2 HP 145TC	7002054	7002064	7001626	7002096
	3 HP 182TC	7002055	7002065	7001627	7002097
	5 HP 184TC	7002056	7002066	7001628	7002098
	7-1/2 HP 213TC	7002057	7002067	7001629	7002099

Key No.	Item		Part Number			
	C-Face Reducer					
			Assembly			
			Series 600, 800 RU-LS		Series 600, 800 LU-RS	
			SA2000 - Shown (RH)		SA2000 - OPP (LH)	
			SA2001 - OPP (LH)		SA2001 - Shown (RH)	
	Reducer		Grove	Reliance	Grove	Reliance
Reducer Model	Motor Frame	3	L1	2	K1	
24	<b>5:1 Ratio</b>					
	218	56C	7005800		7005801	-
	218	145TC	7005802	-	7005803	-
	220	56C	7005804	-	7005805	-
	220	145TC	7005806	-	7005141	-
	220	184TC	7005807	-	7005808	-
	224	145TC	7005809	-	7005810	-
	224	182TC	7005035	-	7005811	-
	226	56C	7030646	-	7030645	-
	226	145TC	7030649	-	7030648	-
	226	182TC	7005021	-	7030474	-
	226	184TC	7005021	-	7030474	-
	230	184TC	7005039	-	7005812	-
	232	213TC	7005813	-	7005814	-
	175	56C	-	7005899	-	7005900
	175	145TC	-	7005901	-	7005902
	200	56	-	7005920	-	7005921
	200	145TC	-	7005922	-	7005923
	200	182TC	-	7005924	-	7005925
	262	56C	-	7005940	-	7005941
	262	145TC	-	7005942	-	7005943
	262	182TC	-	7005944	-	7005945
	262	184TC	-	7005944	-	7005945
	350	184TC	-	7005968	-	7005969



Key No.	Item		Part Number			
	C-Face Reducer					
			Assembly			
			Series 600, 800 RU-LS		Series 600, 800 LU-RS	
			SA2000 - Shown (RH)		SA2000 - OPP (LH)	
			SA2001 - OPP (LH)		SA2001 - Shown (RH)	
Reducer		Grove	Reliance	Grove	Reliance	
Reducer Model	Motor Frame	3	L1	2	K1	
24	<b>7.5:1 Ratio</b>					
	220	56C	7005815	-	7005025	-
	220	145TC	7005159	-	7005027	-
	224	145TC	7005816	-	7005036	-
	224	182TC	7005817	-	7005818	-
	230	184TC	7005819	-	7005820	-
	232	213TC	7005821	-	7005822	-
	242	213TC	7005823	-	7005824	-
	200	56C	-	7005926	-	7005927
	200	145TC	-	7005928	-	7005929
	262	182TC	-	7005946	-	7005947
	350	182TC	-	N/A	-	N/A
24	<b>10:1 Ratio</b>					
	218	56C	7005825	-	7005826	-
	220	56C	7005223	-	7005312	-
	220	145TC	7005827	-	7005828	-
	224	145TC	7005830	-	7005831	-
	226	56C	7031010	-	7031017	-
	226	145TC	7030471	-	7030470	-
	230	182TC	7005832	-	7005833	-
	232	182TC	7031008	-	7031009	-
	232	184TC	7031008	-	7031009	-
	242	184TC	7005834	-	7005835	-
	242	213TC	7005836	-	7005837	-
	175	56C	-	7005903	-	7005904
	200	56C	-	7005930	-	7005931
	200	145TC	-	7005932	-	7005933
	262	56C	-	7005948	-	7005949
	262	145TC	-	7005950	-	7005951
350	182TC	-	7005972	-	7005973	

Key No.	Item		Part Number			
	<b>C-Face Reducer</b>					
			<b>Assembly</b>			
			<b>Series 600, 800 RU-LS</b>		<b>Series 600, 800 LU-RS</b>	
			<b>SA2000 - Shown (RH)</b>		<b>SA2000 - OPP (LH)</b>	
			<b>SA2001 - OPP (LH)</b>		<b>SA2001 - Shown (RH)</b>	
	<b>Reducer</b>		<b>Grove</b>	<b>Reliance</b>	<b>Grove</b>	<b>Reliance</b>
<b>Reducer Model</b>	<b>Motor Frame</b>	<b>3</b>	<b>L1</b>	<b>2</b>	<b>K1</b>	
24	<b>15:1 Ratio</b>					
	218	56C	7005838	-	7005839	-
	220	56C	7005221	-	7005840	-
	220	145TC	7005033	-	7005841	-
	224	56C	7005037	-	7005158	-
	224	145TC	7005038	-	7005032	-
	226	56C	7031016	-	7031014	-
	226	145TC	7005086	-	7005030	-
	230	182TC	7005142	-	7005731	-
	232	145TC	7005842	-	7005843	-
	232	182TC	7005092	-	7005091	-
	242	184TC	7005844	-	7005845	-
	242	213TC	7005846	-	7005847	-
	175	56C	-	7005905	-	7005906
	200	56C	-	7005934	-	7005935
	262	56C	-	7005952	-	7005953
	262	145TC	-	7005954	-	7005955
	350	145TC	-	7005974	-	7005975
350	182TC	-	7005976	-	7005977	

Key No.	Item		Part Number			
	C-Face Reducer					
			Assembly			
			Series 600, 800 RU-LS		Series 600, 800 LU-RS	
			SA2000 - Shown (RH)		SA2000 - OPP (LH)	
			SA2001 - OPP (LH)		SA2001 - Shown (RH)	
Reducer		Grove	Reliance	Grove	Reliance	
Reducer Model	Motor Frame	3	L1	2	K1	
24	<b>20:1 Ratio</b>					
	218	56C	7005848	-	7005849	-
	220	56C	7005850	-	7005851	-
	224	56C	7005852	-	7005853	-
	224	145TC	7005854	-	7005333	-
	226	56C	7031012	-	7031013	-
	226	145TC	7005081	-	7005080	-
	230	182TC	7005855	-	7005320	-
	232	145TC	7030647	-	7031018	-
	232	182TC	7005090	-	7005089	-
	242	182TC	7005856	-	7005857	-
	242	184TC	7005856	-	7005857	-
	175	56C	-	7005907	-	7005908
	200	56C	-	7005936	-	7005937
	262	56C	-	7005746	-	7005956
	262	145TC	-	7005957	-	7005958
	350	145TC	-	7005978	-	7005979
	350	182TC	-	7005980	-	7005981

Key No.	Item		Part Number			
	C-Face Reducer					
			Assembly			
			Series 600, 800 RU-LS		Series 600, 800 LU-RS	
			SA2000 - Shown (RH)		SA2000 - OPP (LH)	
			SA2001 - OPP (LH)		SA2001 - Shown (RH)	
Reducer		Grove	Reliance	Grove	Reliance	
Reducer Model	Motor Frame	3	L1	2	K1	
24	<b>25:1 Ratio</b>					
	218	56C	7005858	-	7005859	-
	220	56C	7005860	-	7005861	-
	224	56C	7005862	-	7005863	-
	224	145TC	7005864	-	7005865	-
	226	56C	7031015	-	7031011	-
	230	145TC	7005866	-	7005867	-
	232	145TC	7005085	-	7005084	-
	232	182TC	7005088	-	7005087	-
	175	56C	-	7005909	-	7005910
	200	56C	-	7005744	-	7005913
	262	56C	-	7005754	-	7005742
	262	145TC	-	7005959	-	7005960
	350	145TC	-	7005982	-	7005983
	350	182TC	-	7005984	-	7005985
	<b>30:1 Ratio</b>					
	218	56C	7005868	-	7005869	-
	224	56C	7005870	-	7005783	-
	226	56C	7005069	-	7005068	-
	230	56C	7005871	-	7005872	-
	232	145TC	7005083	-	7005082	-
	242	145TC	7005874	-	7005875	-
	242	182TC	7005766	-	7005876	-
	175	56C		7005911		7005912
	200	56C		7005914		7005915
	262	56C		7005961		7005962
350	145TC		7005986		7005541	

Key No.	Item		Part Number			
	<b>C-Face Reducer</b>					
			<b>Assembly</b>			
			<b>Series 600, 800 RU-LS</b>		<b>Series 600, 800 LU-RS</b>	
			<b>SA2000 - Shown (RH)</b>		<b>SA2000 - OPP (LH)</b>	
			<b>SA2001 - OPP (LH)</b>		<b>SA2001 - Shown (RH)</b>	
<b>Reducer</b>		<b>Grove</b>	<b>Reliance</b>	<b>Grove</b>	<b>Reliance</b>	
<b>Reducer Model</b>	<b>Motor Frame</b>	<b>3</b>	<b>L1</b>	<b>2</b>	<b>K1</b>	
24	<b>40:1 Ratio</b>					
	220	56C	7005877	-	7005878	-
	224	56C	7005879	-	7005328	-
	226	56C	7005065	-	7005064	-
	230	56C	7005880	-	7005881	-
	232	145TC	7005075	-	7005074	-
	242	145TC	7005882	-	7005883	-
	242	182TC	7005321	-	7005884	-
	200	56C	-	7005916	-	7005917
	262	56C	-	7005752	-	7005963
	350	145TC	-	7005987	-	7005988
24	<b>50:1 Ratio</b>					
	224	56C	7005885	-	7005886	-
	232	56C	7005887	-	7005888	-
	232	145TC	7005073	-	7005072	-
	242	145TC	7005889	-	7005890	-
	200	56C	-	7005918	-	7005919
	262	56C	-	7005964	-	7005965
	350	56C	-	7005989	-	7005990
350	145TC	-	7005991	-	7005992	

Key No.	Item		Part Number			
	<b>C-Face Reducer</b>					
			<b>Assembly</b>			
			<b>Series 600, 800 RU-LS</b>		<b>Series 600, 800 LU-RS</b>	
			<b>SA2000 - Shown (RH)</b>		<b>SA2000 - OPP (LH)</b>	
			<b>SA2001 - OPP (LH)</b>		<b>SA2001 - Shown (RH)</b>	
	<b>Reducer</b>		<b>Grove</b>	<b>Reliance</b>	<b>Grove</b>	<b>Reliance</b>
<b>Reducer Model</b>	<b>Motor Frame</b>	<b>3</b>	<b>L1</b>	<b>2</b>	<b>K1</b>	
24	<b>60:1 Ratio</b>					
	220	56C	7005891	-	7005892	-
	224	56C	7005893	-	7005894	-
	226	56C	7005061	-	7005060	-
	230	56C	7005895	-	7005896	-
	232	56C	7005067	-	7005066	-
	232	145TC	7005071	-	7005070	-
	242	145TC	7005897	-	7005898	-
	200	56C	-	7005938	-	7005939
	262	56C	-	7005966	-	7005967
	350	56C	-	7005993	-	7005994
	350	145TC	-	7005995	-	7005996

**Width Related Parts:**

Key No.	Part Description	Part Number				
		16"	22"	28"	34"	40"
30	Pulley with Shaft, Drive, Lagged Crown, Single Shaft Extension (Power Unit)					
	Series 600 - 6-5/16" / 1-7/16"	684151	684152	684153	684154	684255
	Series 600/CR - 6-5/16" / 1-7/16"	684156	684157	684258	NA	NA
	Series 800 - 8-5/16 / 1-11/16"	684161	684162	684163	684164	684265
	Series 800/CR - 8-5/16 / 1-11/16"	684166	684167	684168	NA	NA
30A	Pulley w/Shaft, Drive, Crown Face, Lagged (SA2000 Intermediate Drive)					
	8-1/4" dia., 1-11/16" Shaft	7005177	7005179	7005008	7005181	7005183
30B	Pulley w/Shaft, Drive, Crown Face, Lagged (SA2001 Low Profile Intermediate Drive)					
	6-1/4" dia., 1-11/16" Shaft	7005289	7005291	7005004	7005293	7005295
31	Pulley with Shaft, Drive, Lagged Crown, Double Shaft Extension (Power Unit with PTO)					
	Series 600 - 6-5/16" / 1-7/16"	684171	684172	684173	684174	684175
	Series 600/CR - 6-5/16" / 1-7/16"	684176	684177	684178	NA	NA
	Series 800 - 8-5/16 / 1-11/16"	684181	684182	684183	684184	684185
	Series 800/CR - 8-5/16 / 1-11/16"	684186	684187	684188	NA	NA
33	Pulley with Shaft, Idler, Lagged Crown, Single Shaft Extension (Series 600 / 800 Idle with PTO)					
	6" / 1-15/16" / 1-7/16"	684271	684272	684273	684274	684275
	6" / 1-15/16" / 1-7/16" (CR)	684276	684277	684278	NA	NA
34	Pulley with Shaft, Take-Up, Flat-Face, No Shaft Extension (Series 1000 Take-Up)					
	6" / 1-15/16"	684286	684287	684288	684289	684290
	6" / 1-15/16" (CR)	684291	684292	684293	NA	NA
35	Pulley with Shaft, Take-Up, Flat-Face, No Shaft Extension (Auxiliary Take-Up)					
	6" / 1-15/16"	4852916	4852922	4852928	4852934	4852940
	6" / 1-15/16" (CR)	684281	684282	684283	NA	NA
36	Pulley with Shaft, Take-Up, Crown-Face, No Shaft Extension (Auxiliary Take-Up)					
	6" / 1-15/16"	684251	684252	684253	684254	684255
	6" / 1-15/16" (CR)	684256	684257	684258	NA	NA
37	Pulley without Axle, Idler, Crown-Face (Series 600 and 800 Idler with Take-Up)					
	3-1/2" Diameter / 1-1/8" Square Bore	501238	501239	501240	501241	501247
38	Pulley w/o Axle, Idler, Flat-Face (Series 600 and 800 Idler and Take-Up)					
	3-1/2" Diameter / 1-1/8" Square Bore	64005916	64005922	64005928	64005934	64005940

Key No.	Part Description	Part Number				
		16"	22"	28"	34"	40"
39	Axle (3.5" Idler, Take-Up Pulley)					
	Axle - 1-1/8" Square	690909	690910	690919	690920	690970
	Axle/CR - 1-1/8" Square (Plated)	690954	690955	69-0956	NA	NA
39A	Pulley & Axle, Take-Up, Crown Face, (SA2000 / 2001 Intermediate / Low Profile)					
	3-1/2" x 1-1/16" HX BR	7005184	7005188	7005009	7005186	7005187
	Axle - 1-1/16" CRS Hex	7005188	7005189	7005010	7005190	7005191
40*	1.9" Diameter Roller with Axle - Carrier, Pressure and Belt Return					
	RLR G198 GH P 01 ___ NC	7017540	7017541	7017542	7017543	7017544
	RLR G196 GH Z 01 ___ NC	7040112	7040113	7040114	NA	NA
	RLR G196 A1 P 01 ___ NC	7015687	7015688	7015689	7015690	7015691
	1.9" Dia. Roller w/Axle - Pop-Out (w/Clips) Carrier Roller					
	RLR G196 GH P 02 ___ NC	7005488	7005489	7005490	7005491	7005492
	RLR G196 GH Z 02 ___ NC	7040321	7040322	7040323	NA	NA
	RLR G196 A1 P 02 ___ NC	7005501	7005502	7005503	7005504	7005505
41*	1.9" Diameter Roller with Axle - Carrier with 2 Grooves					
	RLR G196 GH P 11 ___ NC G2	7017545	7017546	7017547	7017548	7017549
	RLR G196 GH Z 11 ___ NC G2	7040086	7040087	7040088	NA	NA
	RLR G196 A1 P 11 ___ NC G2	7026848	7026849	7026850	7026851	7026852
42	2.5" Diameter Roller with Axle - Snub					
	No.G251AB	501056	501057	501058	501059	501060
	No.G251ABCR	501066	501067	501068	NA	NA
42A	Roller - Adjustable / Fixed Snub SA2000 and SA2001					
	2-9/16" x 11/16 HX BR	7005192	7005193	7005011	7005194	7005195
42B	Shaft - Adjustable Snub SA2001					
	11/16' CRS Hex	7005196	7005197	7005012	7005198	7005199
42C	Shaft - Fixed Snub SA2001					
	11/16' CRS Hex	7005296	7005297	7005045	7005298	7005299

\*Roller Description Explanation on page I-27.



(Example) RLR G196 GH P 01 16.00 NC G2

G2 = Two (2) Grooves (A=3". B=2") - If Applicable

NC = No Cover

16.00 = Conveyor Width "W"

01 = Spring-Loaded Axle; Fixed Roller w/o Grooves

02 = Non Spring Loaded Axle; Pop-out Roller w/o Grooves

11 = Spring-Loaded Axle; Roller w/2 Grooves

P = Plain Steel Axle

S = Stud Axle (With C1 Bearings ONLY)

Z = Zinc-Plated Steel Axle (Cold Room)

A1 = (Bearing Type) ABEC precision Bearing

C1 = (Bearing Type) ABEC Cartridge Tapered Hex

GH = (Bearing Type) Greased, Commercial Bearing

196 = (Roller Tube) 1.90" dia x 16 gage (.065" wall)

G = (Roller Tube Material/Finish) Galvanized Steel

RLR = Roller

---

## Lubricants and Paints

Part Description	Part Number
Reducer Lubricant	
Grove, Above +20° F (1 Gallon)	Consult Factory
Grove, -20° F to +20° F (1 Gallon)	Consult Factory
Reliance, Above +20° F (1 Gallon)	Consult Factory
Reliance, -20° F to +20° F (1 Gallon)	Consult Factory
Paint	
Medium Gray - Spray Can	959002
Intelligrated Satin Gray - Spray Can	7900005